



GENESIS®

The Promise of Performance.

GXT 555R EVO Mobile Shear

PARTS MANUAL



CONTACT INFORMATION

Genesis Attachments

1000 Genesis Drive
Superior, WI 54880 USA

Toll Free: 888-SHEAR-IT
(888-743-2748)

Phone: 715.395.5252

E-mail:
info@genesisattachments.com

Europe/Africa/Middle East Genesis GmbH

Teramostrasse 23
87700 Memmingen, Germany

Phone: +49 83 31 9 25 98 0
Fax: +49 83 31 9 25 98 80
genesis-europe.com

E-mail:
info@genesis-europe.com

Asia Pacific Representative Office

24 Upper Serangoon View #12-28
Singapore 534205

Phone: +65 9673 9730

E-mail:
tchoo@genesisattachments.com

Central America & Colombia

Cra 13A #89-38 / Ofi 613
Bogota, Colombia

Phone: +57 1 610 8160 / 795 8747


E-mail:
contact@themsagroup.com

View and download all manuals: genesisattachments.com/manuals
Patents: genesisattachments.com/products/patents

TABLE OF CONTENTS

CONTACT INFORMATION	2
GENERAL ARRANGEMENT	4
ASSEMBLY PIVOT GROUP - RIGHT SIDE	6
ASSEMBLY PIVOT GROUP - LEFT SIDE	8
ASSEMBLY LOWER BLADES	10
ASSEMBLY UPPER BLADES	12
ASSEMBLY AUTO GUIDE	14
ASSEMBLY CYLINDER PINS	16
ASSEMBLY ACCESS COVERS	18
ASSEMBLY UPPER HEAD	20
ASSEMBLY ROTATION	22
ASSEMBLY ROTATION CIRCUIT	24
SUB-ASSEMBLY ROTATE CROSS-OVER / C'BAL	26
SUB-ASSEMBLY LINE MOUNT MANIFOLD	28
ASSEMBLY OPEN AND CLOSE CIRCUIT	30
ASSEMBLY SWIVEL MANIFOLD	32
REGEN BLOCK SUB-ASSEMBLY	34
ASSEMBLY SLEWING RING LUBRICATION	36
BOLT TORQUE SPECIFICATIONS	38
THREAD TREATMENT DIAGRAM	39
Mobile Shears	39
PROCEDURES	40
Cleaning	40
Threadlocker	40
Anti-Seize	41
No Thread Treatment	41
BOLT TORQUE SPECIFICATIONS	42
Dry Torque Values	42
Wet Torque Values	42
O-RING BOSS & FLAT FACE O-RING TORQUE SPECIFICATIONS	43
BOLT DRIVE SPECIFICATIONS	44
WARRANTY	45
Claim Procedure	45
Blade Warranty	45
PARTS ORDER POLICY AND PROCEDURE	46
Parts Orders Should Include	46
Placing Orders	46
Part Numbers	46
Shipping	46
Invoices	46
Returns	46
Warranty Returns	46
PARTS ORDER FORM	47
INDEX	48
CONTACT INFORMATION	50

GENERAL ARRANGEMENT

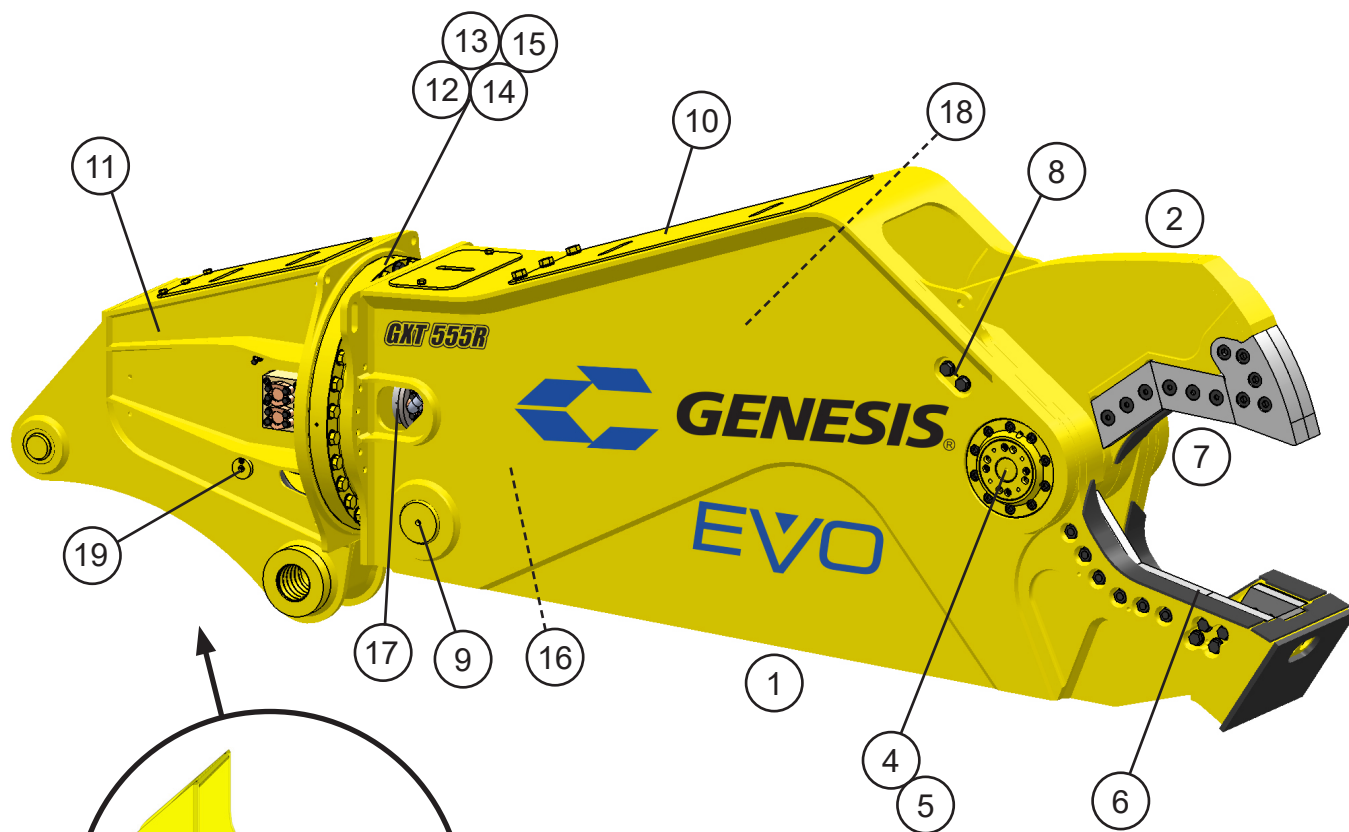

3


Wtmg Lug Upper Head

Part Number is Serial Number specific.
For replacement parts call the Genesis
Parts Department.

USA

Europe

715-395-3488 +49 83 31 9 25 98 0

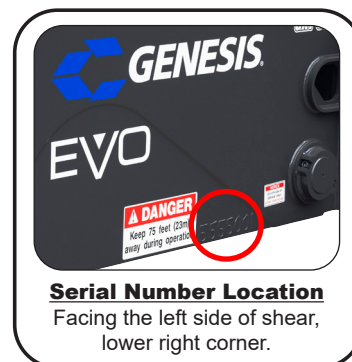

Serial Number Location

Facing the left side of shear,
lower right corner.

GENERAL ARRANGEMENT

ITEM	QTY	PART NUMBER	DESCRIPTION
1	1	*	Wtmg Stick
2	1	*	Wtmg Upper
3		*	Wtmg Lug Upper Head
4		See page 6	Assembly Pivot Group - Right Side
5		See page 8	Assembly Pivot Group - Left Side
6		See page 10	Assembly Lower Blades
7		See page 12	Assembly Upper Blades
8		See page 14	Assembly Auto Guide
9		See page 16	Assembly Cylinder Pins
10		See page 18	Assembly Access Covers
11		See page 20	Assembly Upper Head
12		See page 22	Assembly Rotation
13		See page 24	Assembly Rotation Circuit
14		See page 26	Sub-Assembly Rotate Cross-over / C'bal
15		See page 28	Sub-Assembly Line Mount Manifold
16		See page 30	Assembly Open and Close Circuit
17		See page 32	Assembly Swivel Manifold
18		See page 34	Sub-Assembly Regen Block
19		See page 36	Assembly Slewing Ring Lubrication

* Part numbers are Serial Number specific. For replacement parts call the Genesis Parts Department.


USA

715-395-3488

Europe

+49 83 31 9 25 98 0


ASSEMBLY PIVOT GROUP - RIGHT SIDE

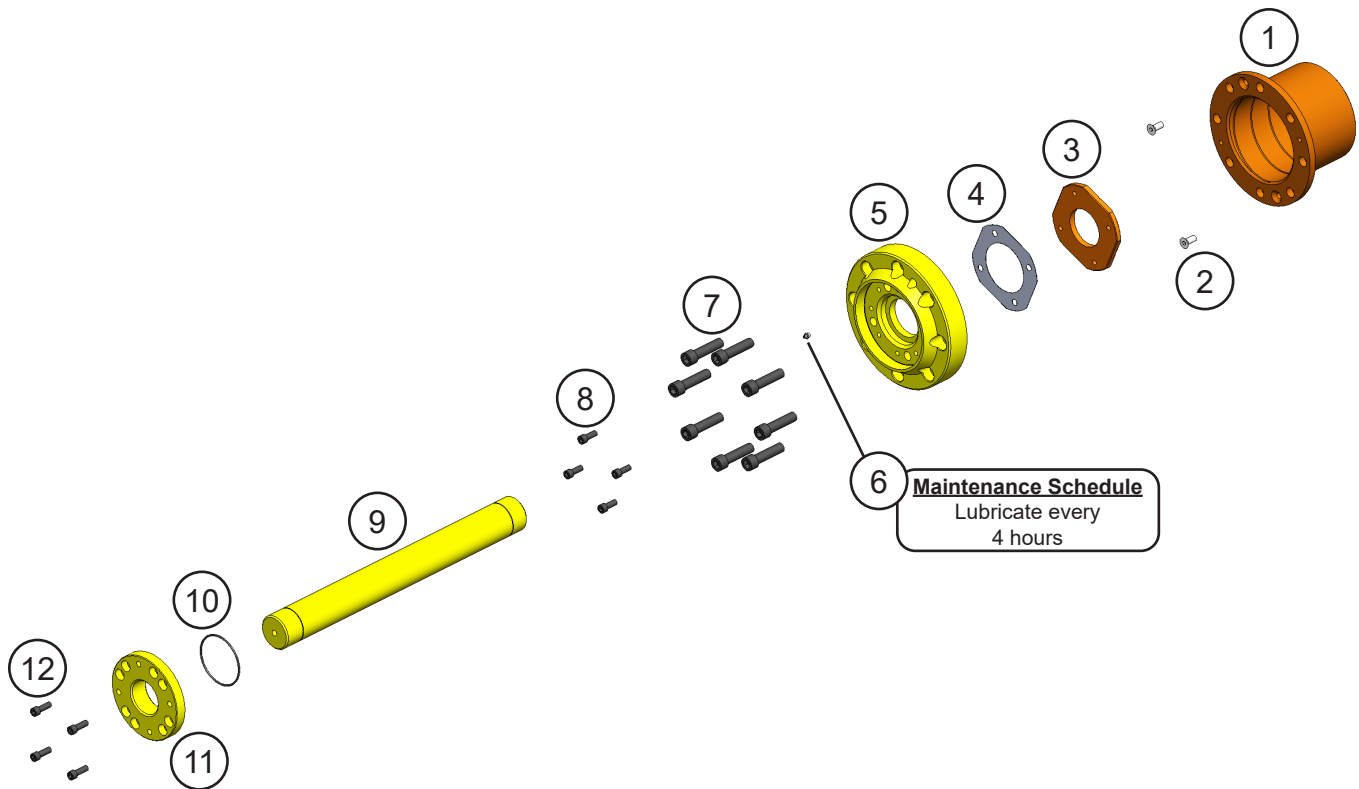

ASSEMBLY PIVOT GROUP - RIGHT SIDE

ITEM	QTY	PART NUMBER	DESCRIPTION
1	1	1103125	Mach Bearing
2	2	F0412030	Flat Head Capscrew M12 x 1.75 x 30
3	1	1110389	Mach Thrust Washer
4	1	1110396	Shim Set Thrust Washer
5	1	1110385	Mach End Cap
6	1	6200002	Grease Fitting
7	8	F0620080	Socket Head Capscrew M20 x 2.50 x 80
8	4	F0612030	Socket Head Capscrew M12 x 1.75 x 30
9	1	1110390	Mach Tie Rod
10	1	S0190244	O-Ring
11	1	1110387	Mach Tie Rod Nut
12	4	F0612025	Socket Head Capscrew M12 x 1.75 x 25

ASSEMBLY PIVOT GROUP - LEFT SIDE

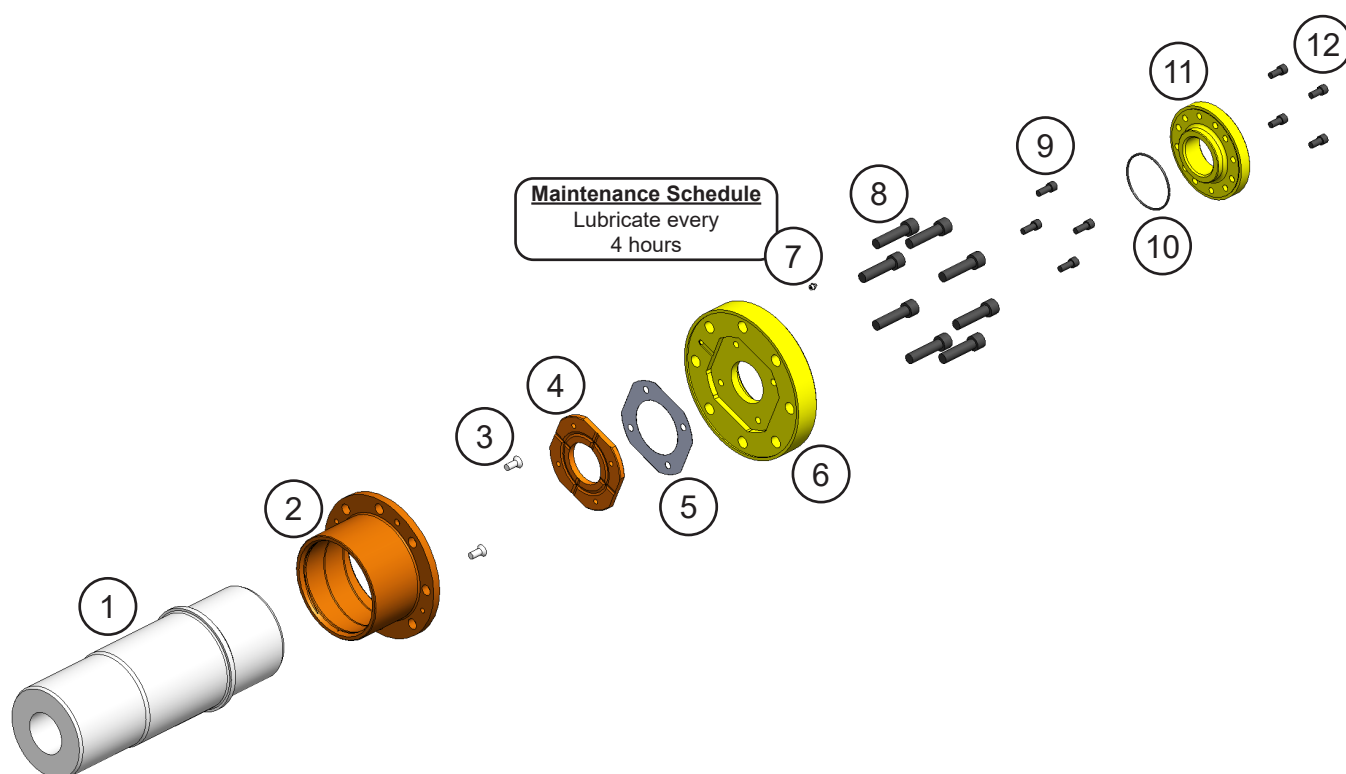

ASSEMBLY PIVOT GROUP - LEFT SIDE

ITEM	QTY	PART NUMBER	DESCRIPTION
1	1	*	Mach Main Shaft
2	1	1103126	Mach Bearing
3	2	F0412030	Flat Head Capscrew M12 x 1.75 x 30
4	1	1110389	Mach Thrust Washer
5	1	1110396	Shim Set Thrust Washer
6	1	1110385	Mach End Cap
7	1	6200002	Grease Fitting
8	8	F0620080	Socket Head Capscrew M20 x 2.50 x 80
9	4	F0612030	Socket Head Capscrew M12 x 1.75 x 30
10	1	S0190244	O-Ring
11	1	1110387	Mach Tie Rod Nut
12	4	F0612025	Socket Head Capscrew M12 x 1.75 x 25

* Part number is Serial Number specific. For replacement parts call the Genesis Parts Department.


USA

715-395-3488

Europe

+49 83 31 9 25 98 0


ASSEMBLY LOWER BLADES

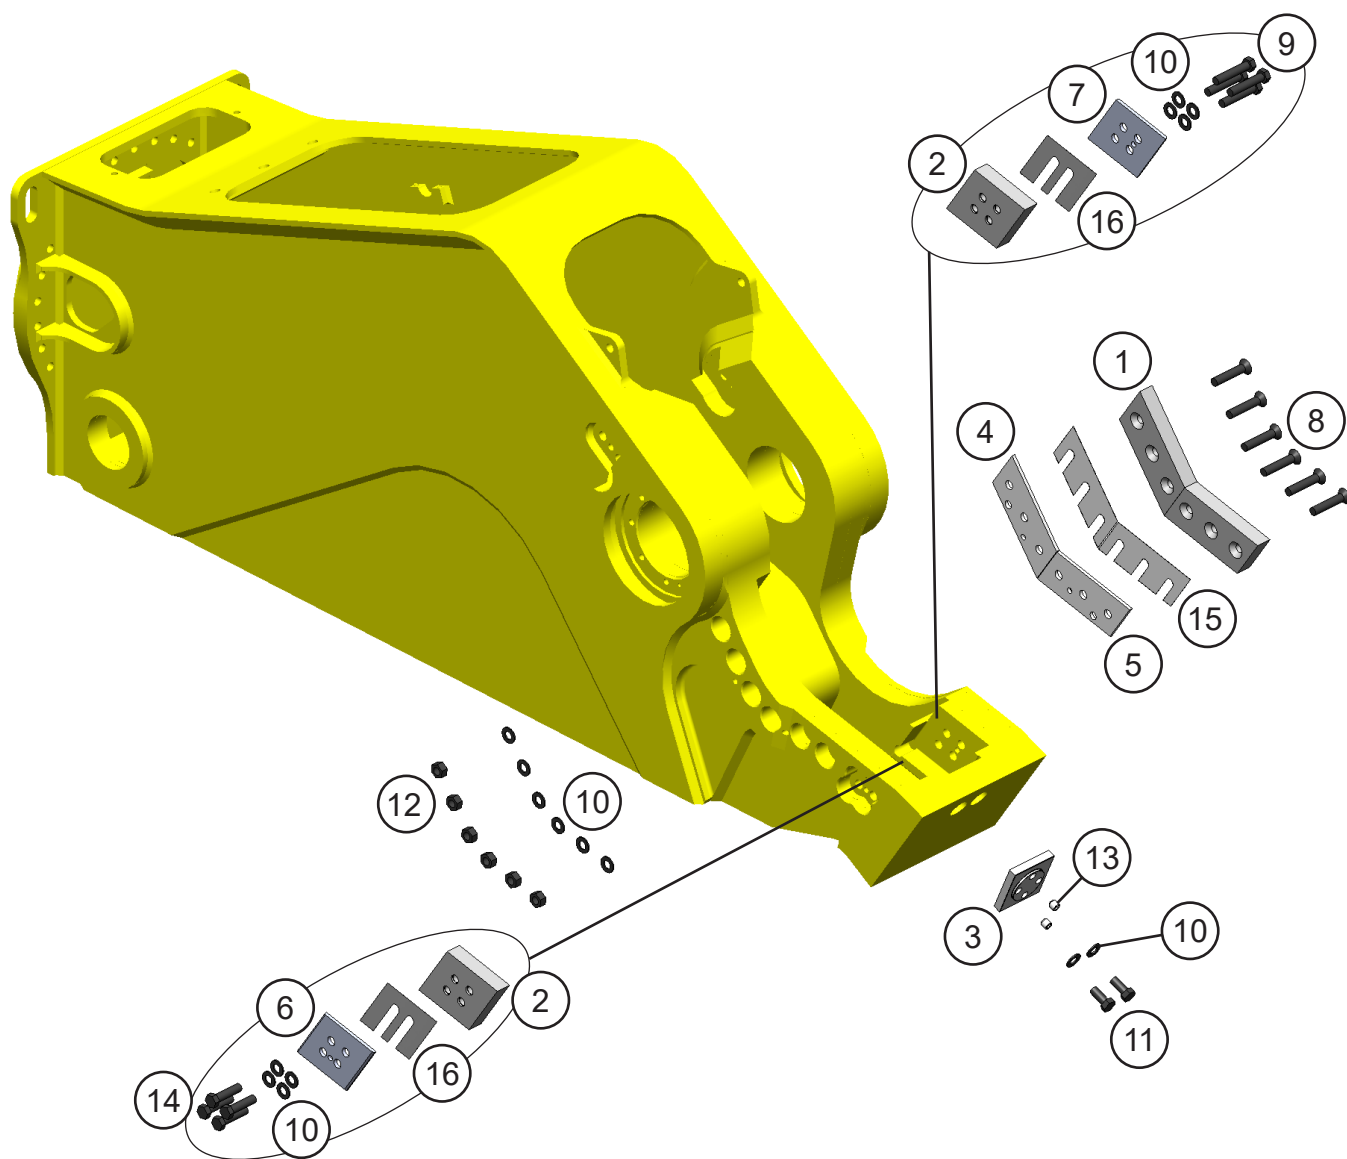

ASSEMBLY LOWER BLADES

ITEM	QTY	PART NUMBER	DESCRIPTION
1	2	1103536	Mach Blade
2	2	1105941	Mach Blade Guide
3	1	1101955	Mach Blade Razor
4	1	1104649	Mach Adjust Plate Primary
5	1	1104650	Mach Adjust Plate Secondary
6	1	1106413	Mach Guide Blade Adjust Plate
7	1	1106414	Mach Guide Blade Adjust Plate
8	6	F0588450	Flat Head Capscrew $\frac{7}{8}$ - 9 x 4 $\frac{1}{2}$
9	4	F0288450	Hex Head Capscrew $\frac{7}{8}$ - 9 x 4 $\frac{1}{2}$
10	16	F1300088	Flat Washer Narrow $\frac{7}{8}$
11	2	F0288200	Hex Head Capscrew $\frac{7}{8}$ - 9 x 2
12	6	F0908809	Hex Nut $\frac{7}{8}$ - 9
13	2	F2588088	Set Screw Socket Head $\frac{7}{8}$ - 9 x $\frac{7}{8}$
14	4	F0288350	Hex Head Capscrew $\frac{7}{8}$ - 9 x 3 $\frac{1}{2}$
15		1104652	Shim Set, Blade
16		1106477	Shim Set, Guide Blade


ASSEMBLY UPPER BLADES

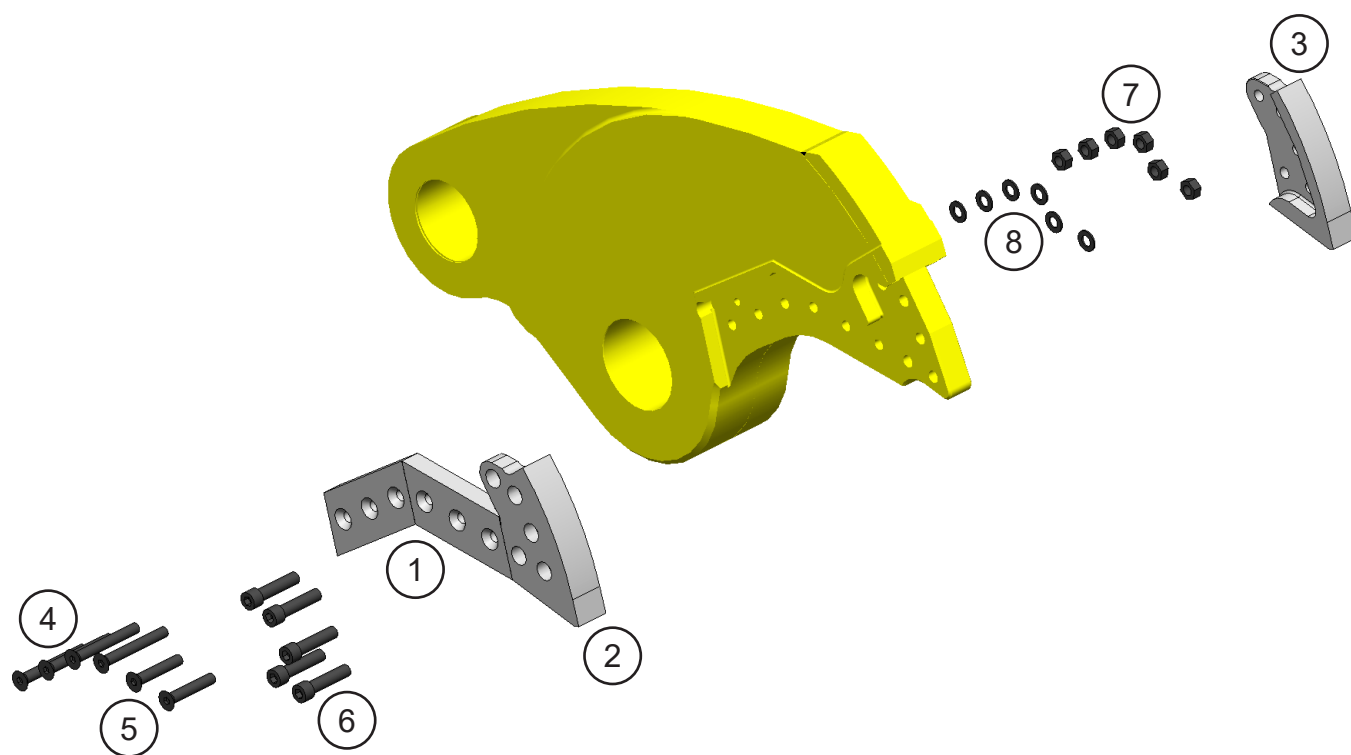

ASSEMBLY UPPER BLADES

ITEM	QTY	PART NUMBER	DESCRIPTION
1	2	1103536	Mach Blade
2	1	1105939	Mach Blade Tip Right
3	1	1105940	Mach Blade Tip Left
4	4	F0588700	Flat Head Capscrew $\frac{7}{8}$ - 9 x 7
5	2	F0588500	Flat Head Capscrew $\frac{7}{8}$ - 9 x 5
6	5	1103609	Mach Bolt Socket Head Capscrew 1 - 8 x 4½
7	6	F0908809	Hex Nut $\frac{7}{8}$ - 9
8	6	F1300088	Flat Washer Narrow $\frac{7}{8}$

ASSEMBLY AUTO GUIDE

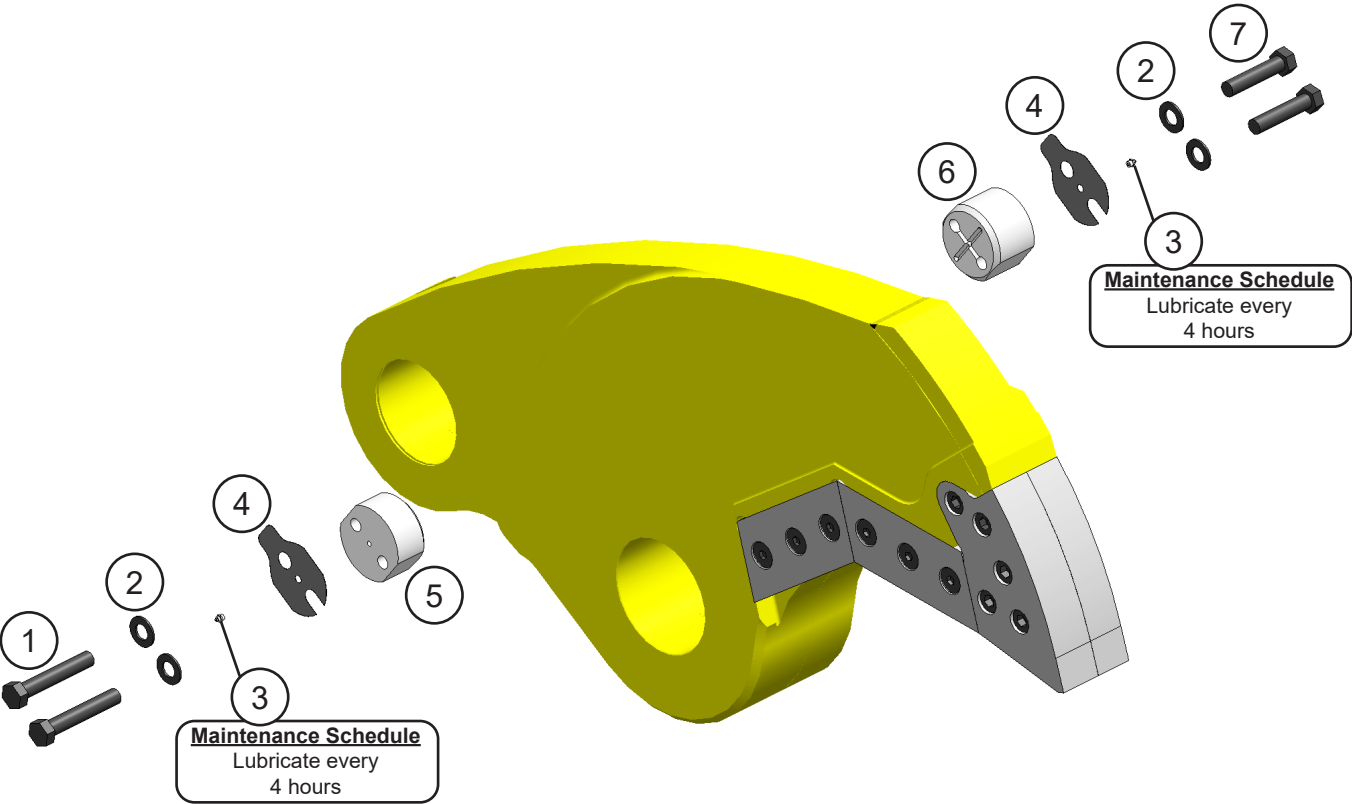

ASSEMBLY AUTO GUIDE

ITEM	QTY	PART NUMBER	DESCRIPTION
1	2	F0210600	Hex Head Capscrew 1 - 8 x 6.00
2	4	F1200100	Flat Washer Narrow 1"
3	2	6200002	Grease Fitting
4		1106478	Shim Set, Auto Guide
5	1	*	Mach Auto Guide, Blade Side
6	1	*	Mach Auto Guide, Guide Side
7	2	F0210450	Hex Head Capscrew 1 - 8 x 4.75

* Part numbers are Serial Number specific. For replacement parts call the Genesis Parts Department.


USA

715-395-3488

Europe

+49 83 31 9 25 98 0


ASSEMBLY CYLINDER PINS

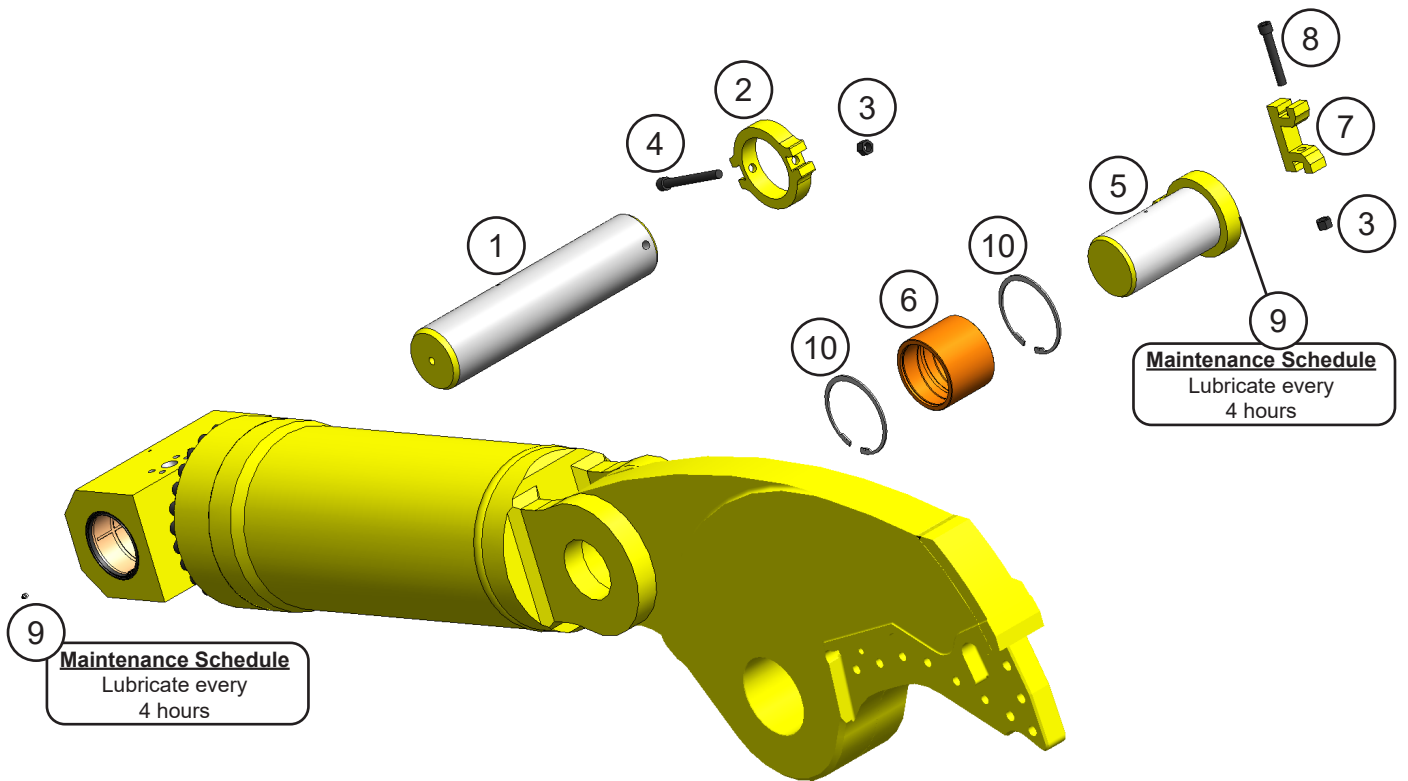

ASSEMBLY CYLINDER PINS

ITEM	QTY	PART NUMBER	DESCRIPTION
1	1	1105943	Mach Pin Rear
2	1	1103172	Mach Pin Keeper Rear
3	2	F1020250	Nylock Hex Nut M20 x 2.50
4	1	F0620200	Socket Head Capscrew M20 x 2.50 x 200
5	1	1105985	Wldt Front Cylinder Pin
6	1	1110213	Mach Bearing Upper Cylinder Connection
7	1	1102487	Mach Pin Keeper (Clevis)
8	1	F0620130	Socket Head Capscrew M20 x 2.50 x 130
9	2	6200002	Grease Fitting
10	2	6200098	Snap Ring



ASSEMBLY ACCESS COVERS

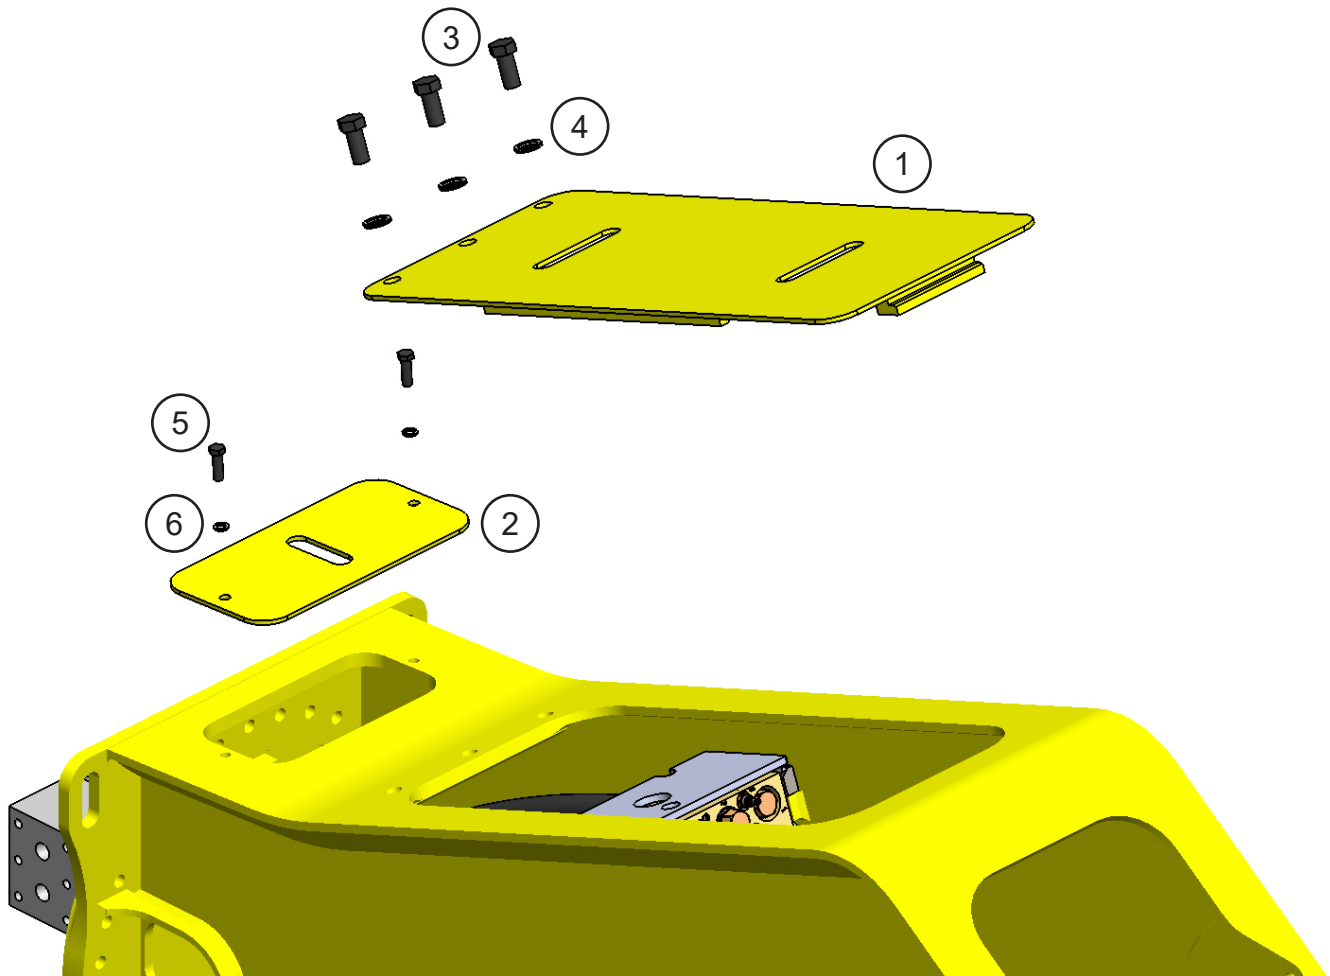

ASSEMBLY ACCESS COVERS

ITEM	QTY	PART NUMBER	DESCRIPTION
1	1	1110392	Wldt Cover
2	1	1110290	Plt Rear Cover
3	3	F0127040	Hex Head Capscrew M27 x 3 x 40
4	3	F1900113	Wedge Lock Washer 1 $\frac{1}{8}$
5	2	F0116050	Hex Head Capscrew M16 x 2.0 x 50
6	2	F1900063	Wedge Lock Washer $\frac{5}{8}$

ASSEMBLY UPPER HEAD

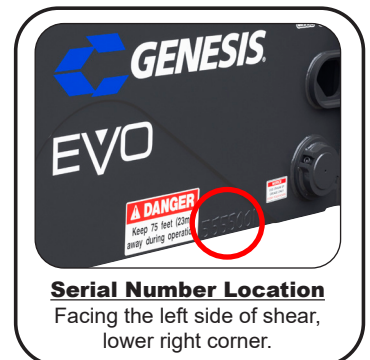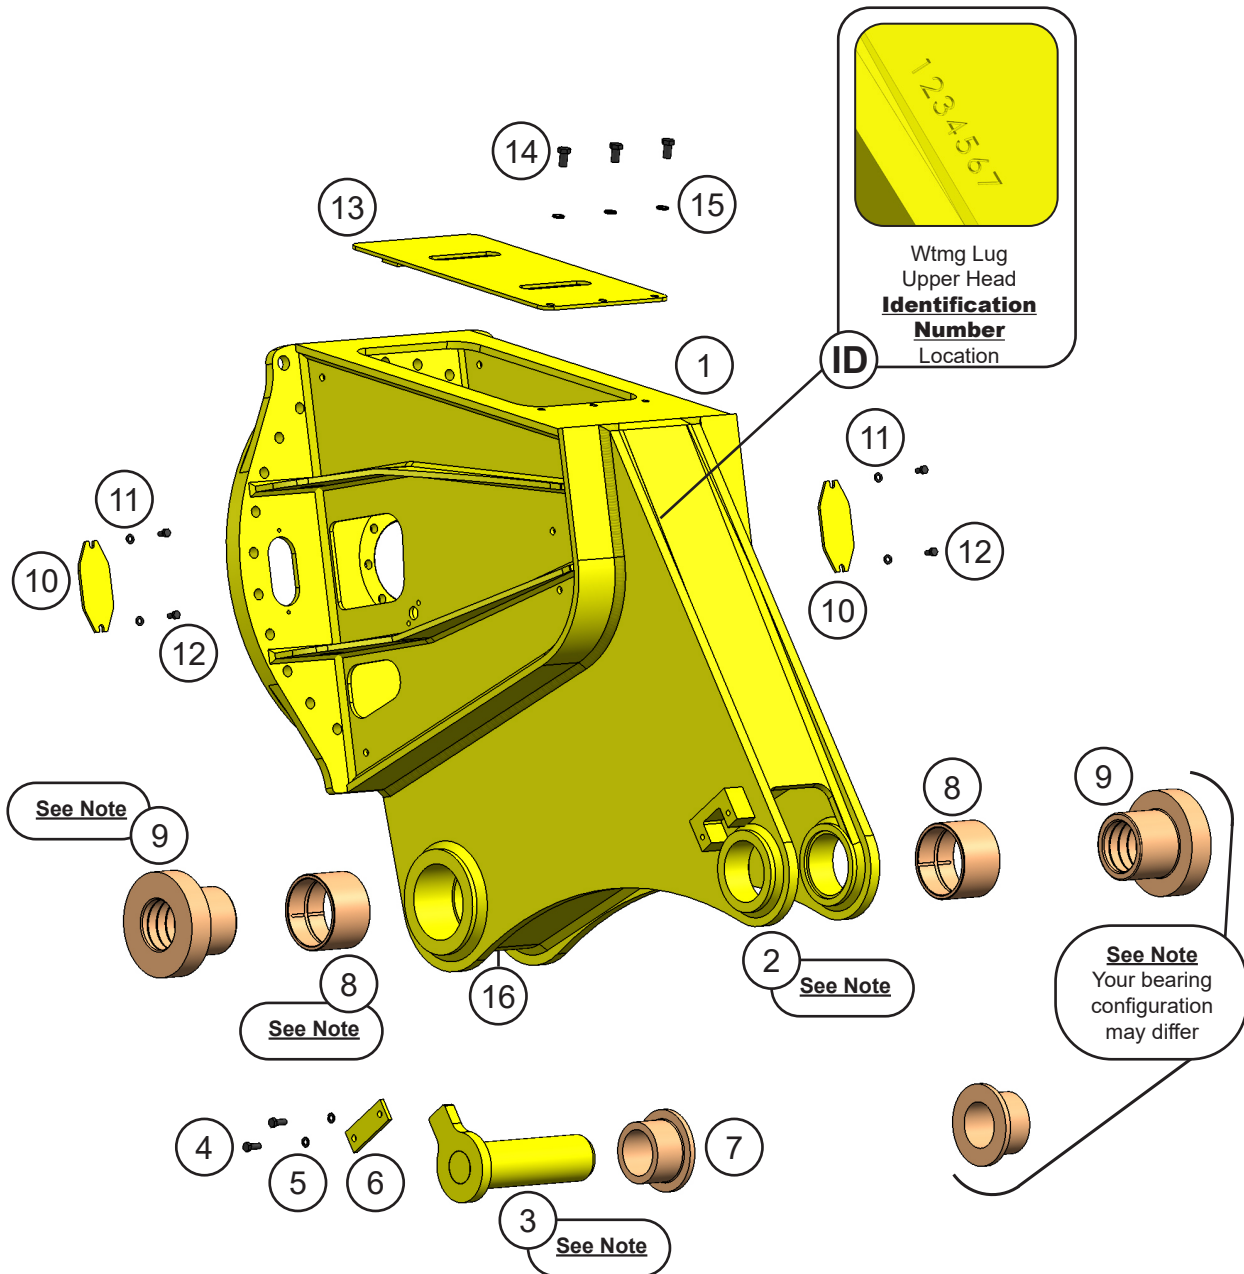

ASSEMBLY UPPER HEAD

ITEM	QTY	PART NUMBER	DESCRIPTION
1	1	*	Mach Sub Head
2	1	*	Mach Lug Upper Head
3	1	*	Wldt Pin
4	2	F0112030	Hex Head Capscrew M12 x 1.75 x 30
5	2	F1401200	Lock Washer M12
6	1	5500752	Plt Strap
7	2	*	Mach Spacer Sleeve
8	2	*	Mach Bearing
9	2	*	Mach Boom Bearing
10	2	1105883	Plt Bolt Cover
11	4	F1201021	Flat Washer M10
12	4	F0110020	Hex Head Capscrew M10 x 1.50 x 20
13	*	*	Cover
14	*	*	Hex Head Capscrew
15	*	*	Washer
16	1	6200002	Grease Fitting

* Part numbers are Serial Number specific. For replacement parts call the Genesis Parts Department.



USA

715-395-3488

Europe

+49 83 31 9 25 98 0



ASSEMBLY ROTATION

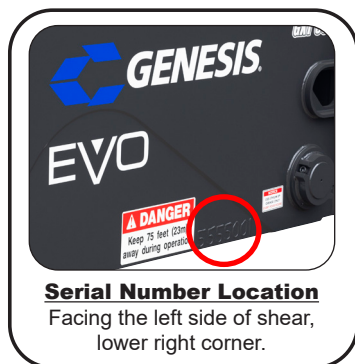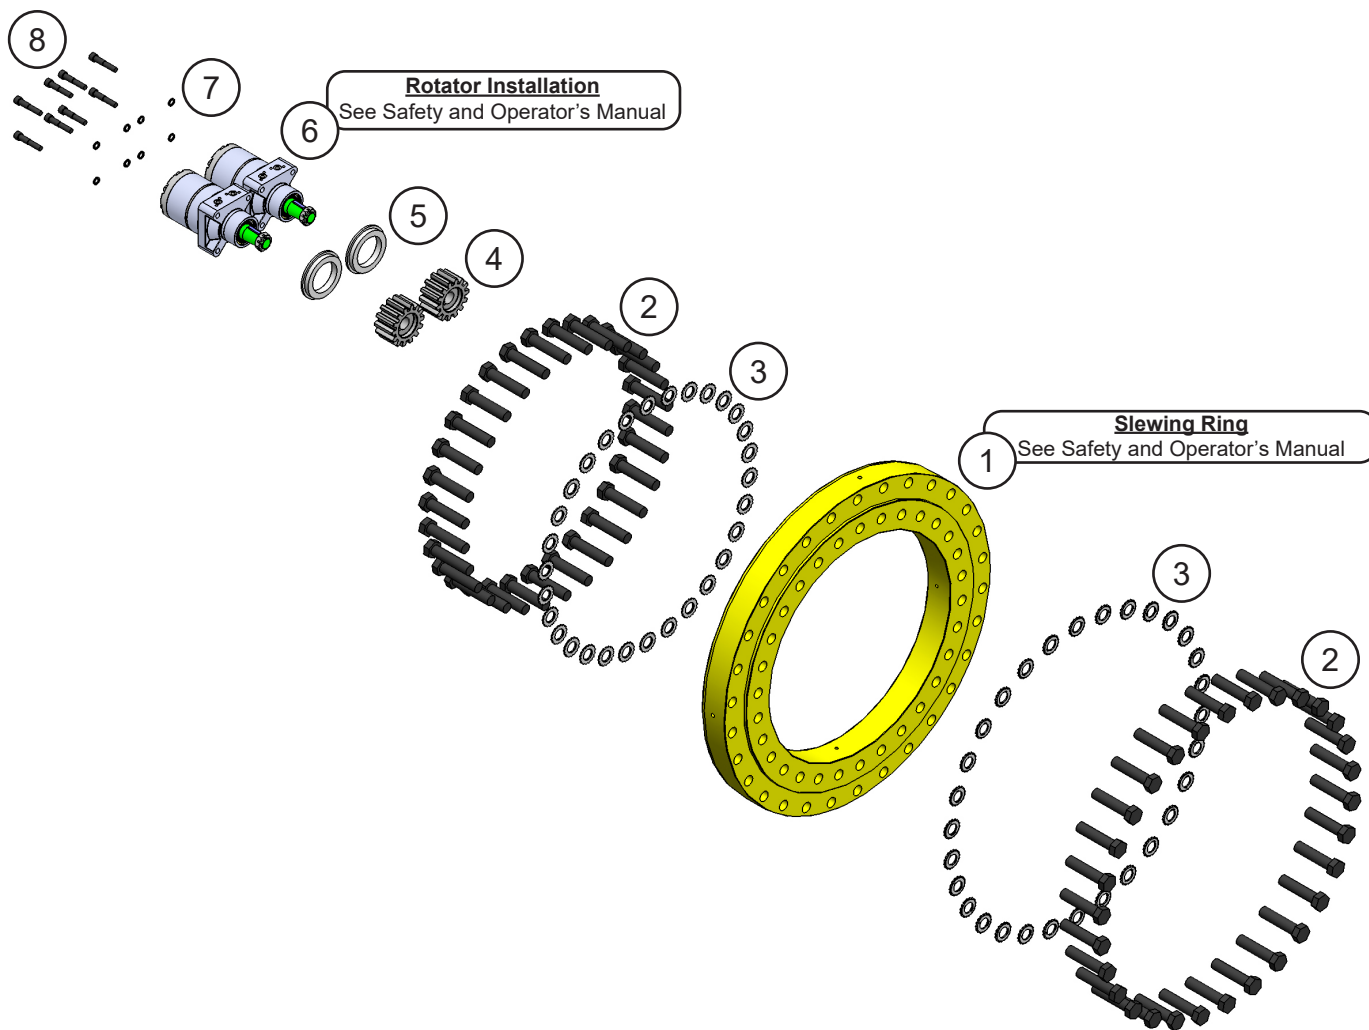

ASSEMBLY ROTATION

ITEM	QTY	PART NUMBER	DESCRIPTION
1	1	6300429	Bearing Slewing
2	60	F0127120	Hex Head Capscrew M27 x 3 x 120
3	60	F2802700	Hytorc Washer M27
4	2	3101235	Motor Pinion
5	2	3501835	Mach Spacer
6	2	6380090	Motor
7	8	F1900050	Wedge Lock Washer 1/2
8	8	1108011	Socket Head Capscrew Custom M12 x 1.75 x 70


ASSEMBLY ROTATION CIRCUIT

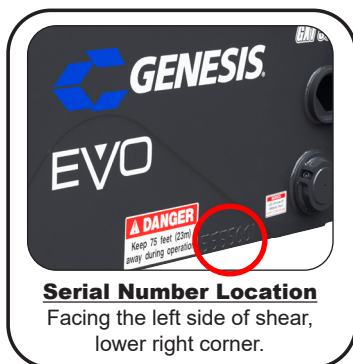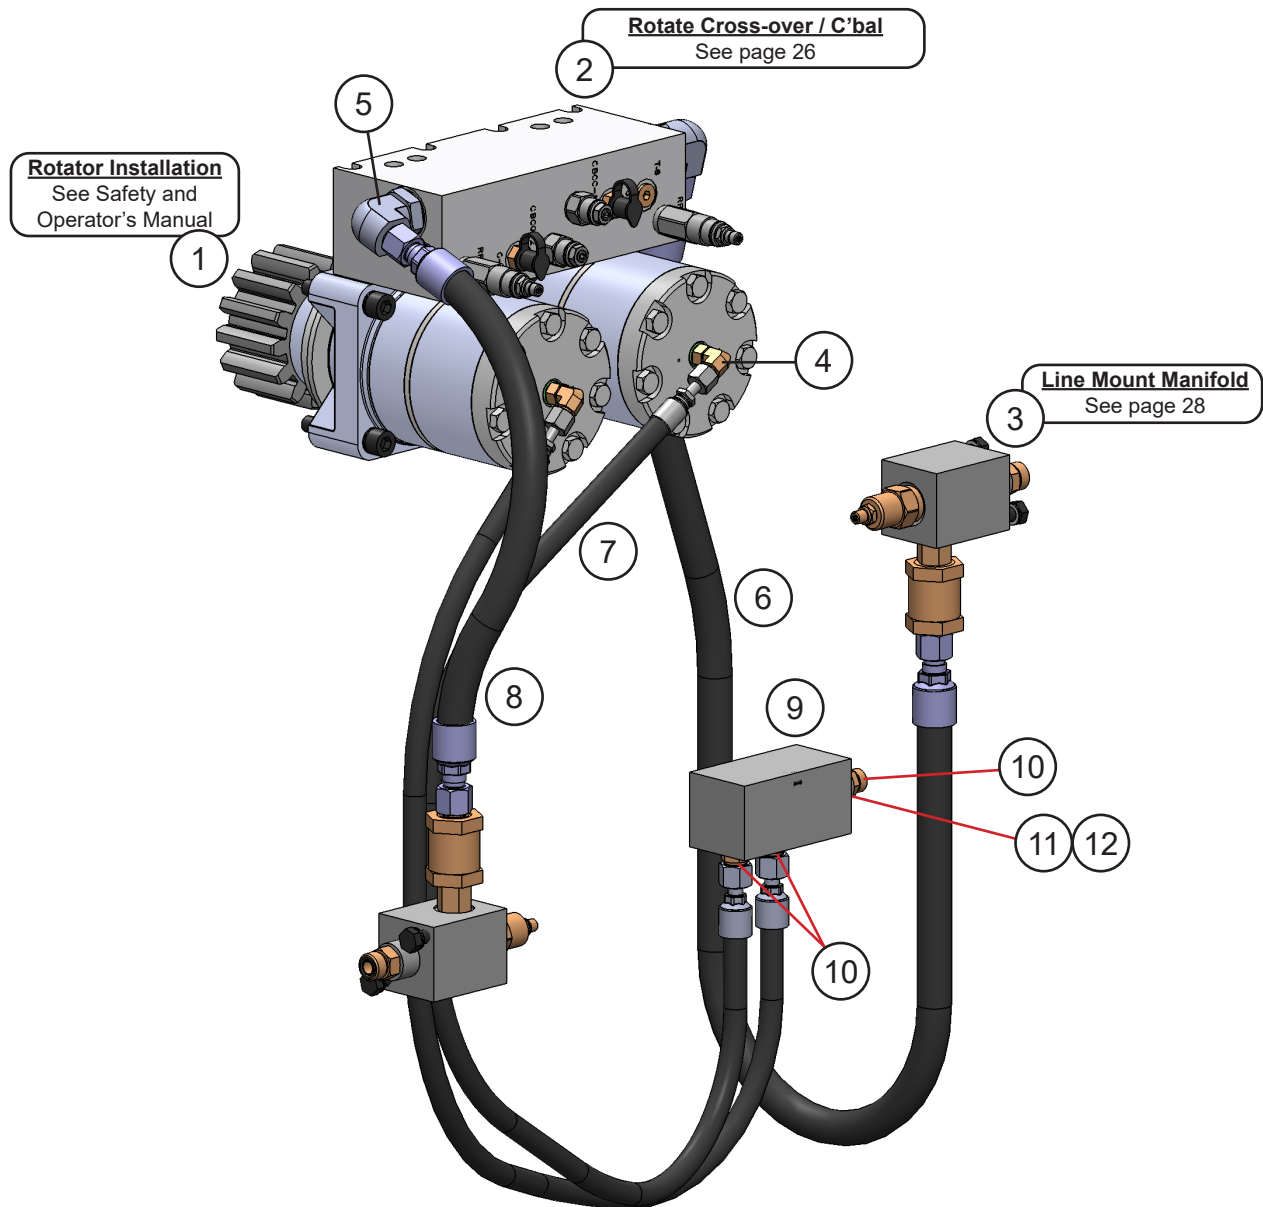

ASSEMBLY ROTATION CIRCUIT

ITEM	QTY	PART NUMBER	DESCRIPTION
1	1	See page 22	Assembly Rotation
2	1	See page 26	Sub-Assembly Rotate Cross-over / C'bal
3	2	See page 28	Sub-Assembly Line Mount Manifold
4	2	6300768	Adapter 04MB-04MO-90
5	2	6310082	Adapter 12MB-08MO-90
6	1	5517829	Hose
7	2	5519832	Hose
8	1	5517828	Hose
9	1	6302661	Case Drain Manifold
10	3	6300018	Adapter 06MB-06MO
11	2	F0110030	Hex Head Capscrew M10 x 1.50 x 30
12	2	F1900040	Wedge Lock Washer $\frac{3}{8}$

SUB-ASSEMBLY ROTATE CROSS-OVER / C'BAL

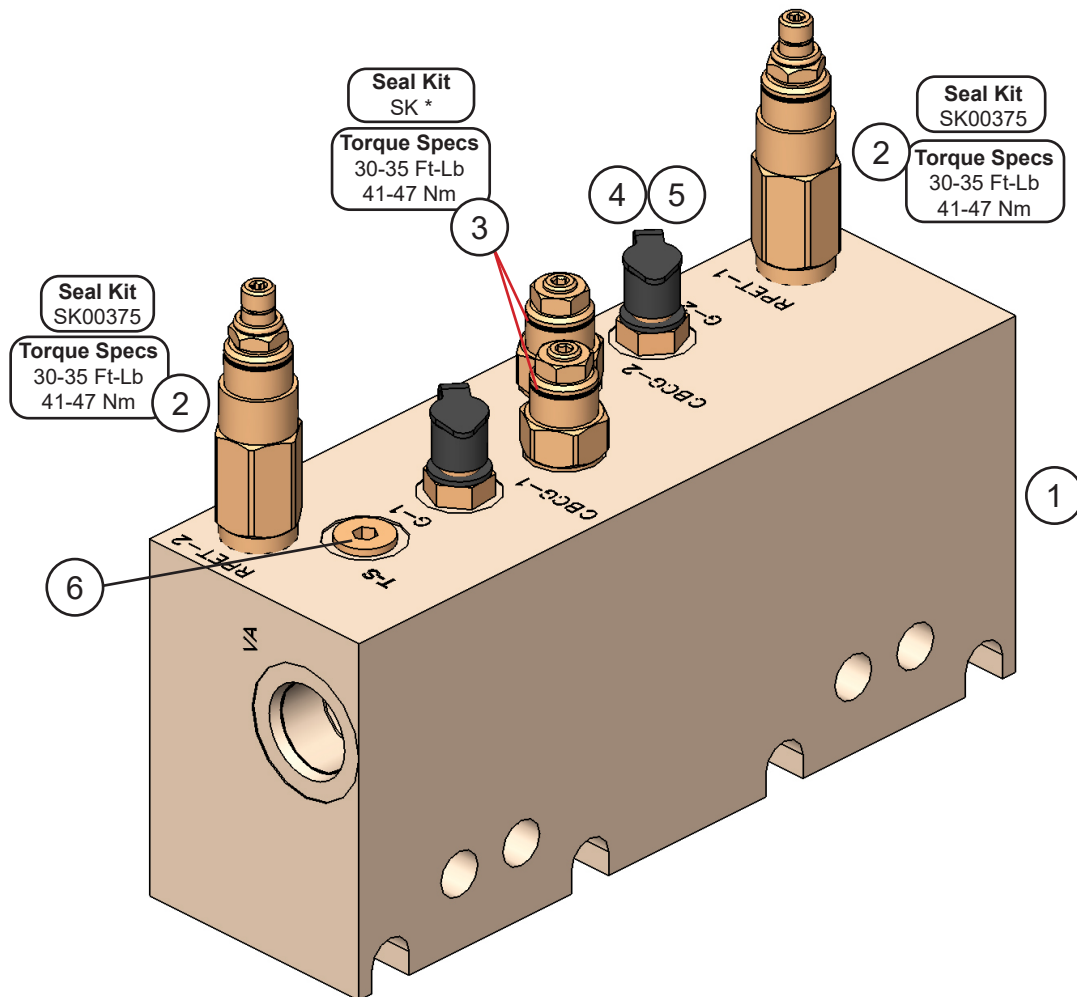

SUB-ASSEMBLY ROTATE CROSS-OVER / C'BAL

ITEM	QTY	PART NUMBER	DESCRIPTION	
1	1	6360143	Valve Block	
2	2	6301673	Valve Relief	Seal Kit SK00375
3	2	*	Valve Counterbalance	Seal Kit SK *
4	2	6300014	Diagnostic Nipple 06MB	
5	2	6310001	Diagnostic Nipple Dust Cap	
6	1	6300153	Plug Socket Head 06MB	

* Part numbers are Serial Number specific. For replacement parts call the Genesis Parts Department.


USA

715-395-3488

Europe

+49 83 31 9 25 98 0


SUB-ASSEMBLY LINE MOUNT MANIFOLD

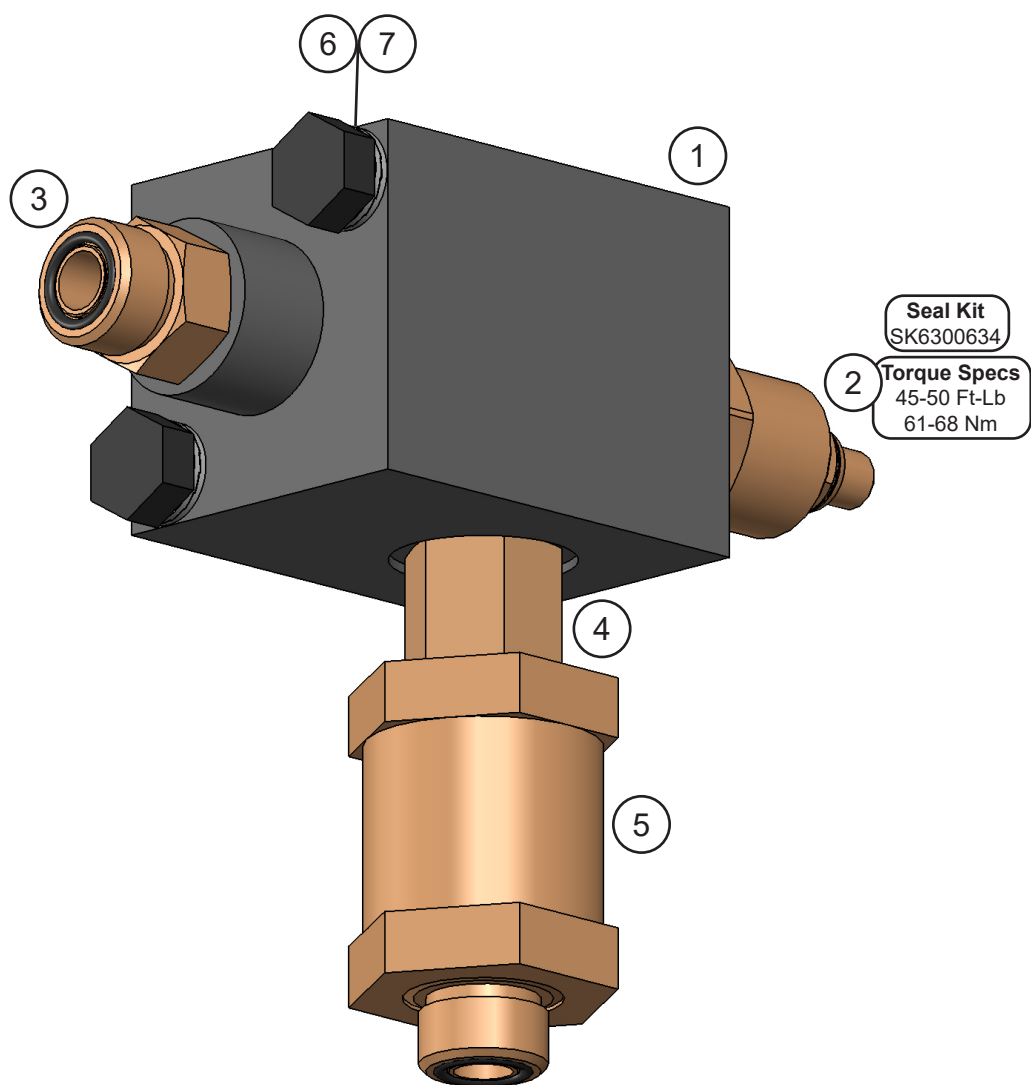

SUB-ASSEMBLY LINE MOUNT MANIFOLD

ITEM	QTY	PART NUMBER	DESCRIPTION
1	1	6302658	Valve Line Body
2	1	6300361	Valve Flow Control Seal Kit SK6300634
3	1	6310050	Adapter 08MB - 08MO
4	1	6310183	Adapter 08MB - 08MB
5	1	6300364	Filter
6	2	F0110030	Hex Head Capscrew M10 x 1.50 x 30
7	2	F1900040	Wedge Lock Washer $\frac{3}{8}$

ASSEMBLY OPEN AND CLOSE CIRCUIT

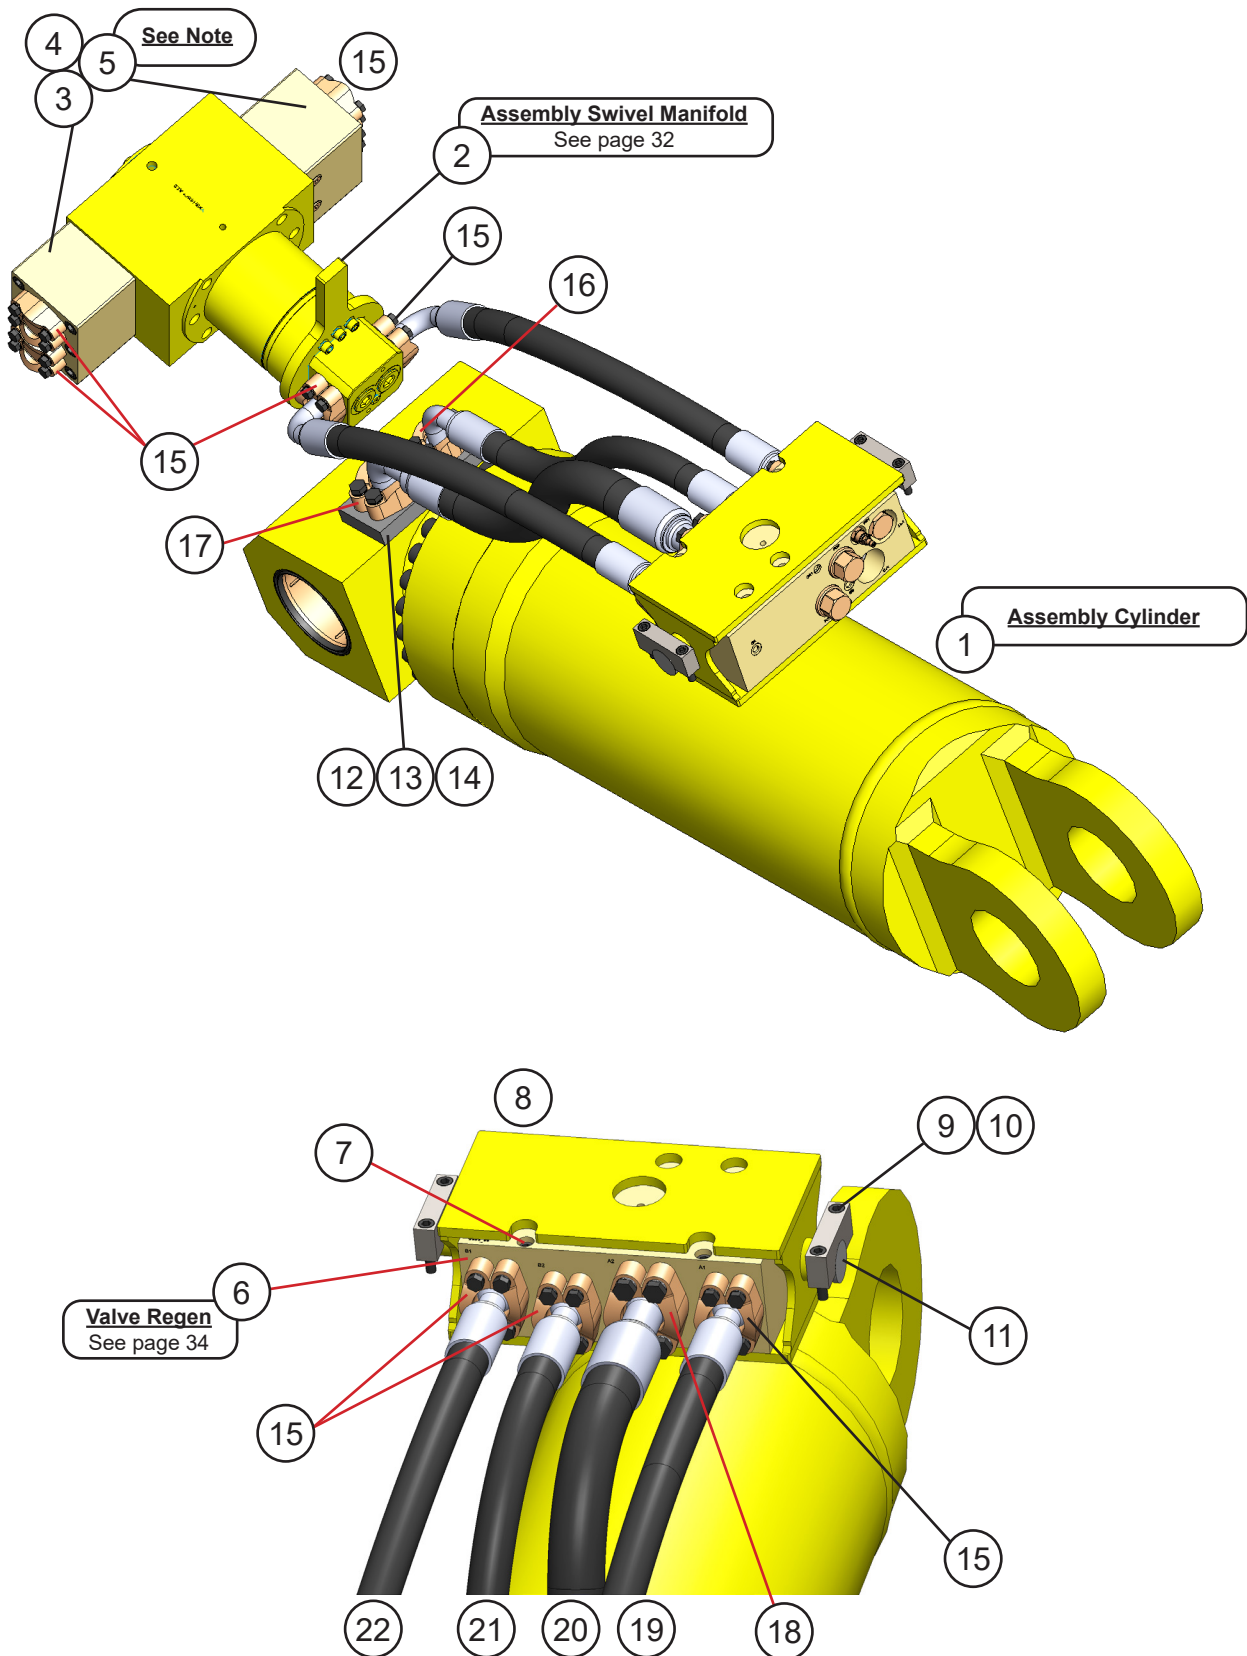

ASSEMBLY OPEN AND CLOSE CIRCUIT


ITEM	QTY	PART NUMBER	DESCRIPTION
1	1	*	Assembly Cylinder B14.0 R9.0 S32.75
2	1	See page 32	Assembly Swivel Manifold
3	2	*	Mach Port Block
4	12	*	Hex Head Capscrew
5	4	*	O-Ring
6	1	See page 34	Valve Regen
7	4	F0612120	Socket Head Capscrew M12 x 1.75 x 120
8	1	1110254	Valve Regen Tray
9	4	F0612055	Socket Head Capscrew M12 x 1.75 x 55
10	2	1109210	Regen Tray Upper Bearing
11	2	1110397	Regen Tray Spacer
12	1	1110703	Cylinder Spacer
13	1	S0190225	O-Ring
14	1	S0190222	O-Ring
15	9	1¼" Split Flange Kit	
	2	H0262125	Split Flange Half 1.25 Code 62
	4	F0112050	Hex Head Capscrew M12 x 1.75 x 50
	4	F1900050	Wedge Lock Washer ½
	1	S0190222	O-Ring
16	1	1¼" Split Flange Kit	
	2	H0262125	Split Flange Half 1.25 Code 62
	4	F0112080	Hex Head Capscrew M12 x 1.75 x 80
	4	F1900050	Wedge Lock Washer ½
	1	S0190222	O-Ring
17	1	1½" Split Flange Kit	
	2	H0262150	Split Flange Half 1.50 Code 62
	4	F0116090	Hex Head Capscrew M16 x 2.0 x 90
	4	F1900063	Wedge Lock Washer ⅝
	1	S0190225	O-Ring
18	1	1½" Split Flange Kit	
	2	H0262150	Split Flange Half 1.50 Code 62
	4	F0116060	Hex Head Capscrew M16 x 2.0 x 60
	4	F1900063	Wedge Lock Washer ⅝
	1	S0190225	O-Ring
19	1	1106562	Hose
20	1	1110710	Hose
21	1	1110711	Hose
22	1	1106561	Hose

* Part numbers are Serial Number specific. For replacement parts call the Genesis Parts Department.

USA 715-395-3488

Europe +49 83 31 9 25 98 0

ASSEMBLY SWIVEL MANIFOLD

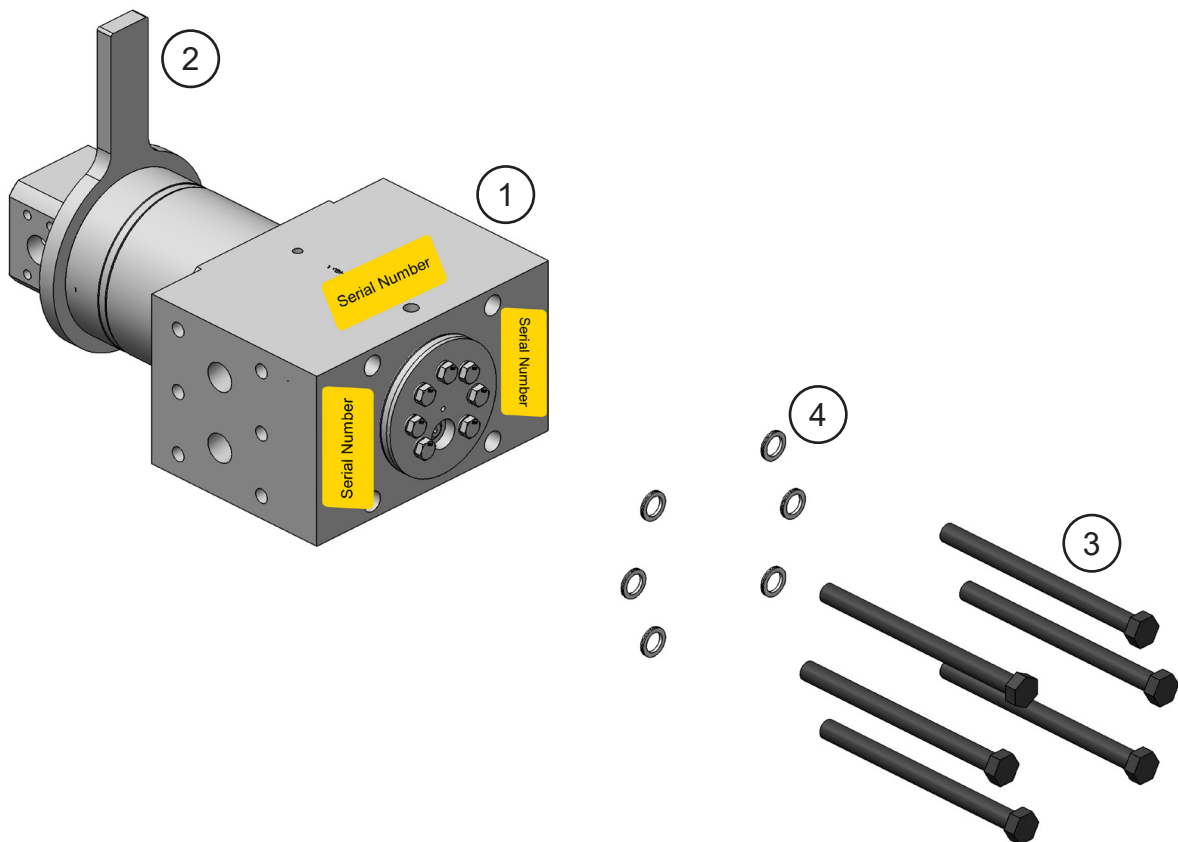

ASSEMBLY SWIVEL MANIFOLD

ITEM	QTY	PART NUMBER	DESCRIPTION
1	1	*	Assembly Swivel Manifold
2	1	*	Torque Arm Kit
3	6	F0120260	Hex Head Capscrew M20 x 2.50 x 260
4	6	F1900075	Wedge Lock Washer $\frac{3}{4}$

* Part numbers are Serial Number specific.

For replacement parts and seal kit, call the Genesis Parts Department.

The swivel Serial Number, located in one of the three highlighted areas, is required for **any** parts order.


USA

715-395-3488

Europe

+49 83 31 9 25 98 0


REGEN BLOCK SUB-ASSEMBLY

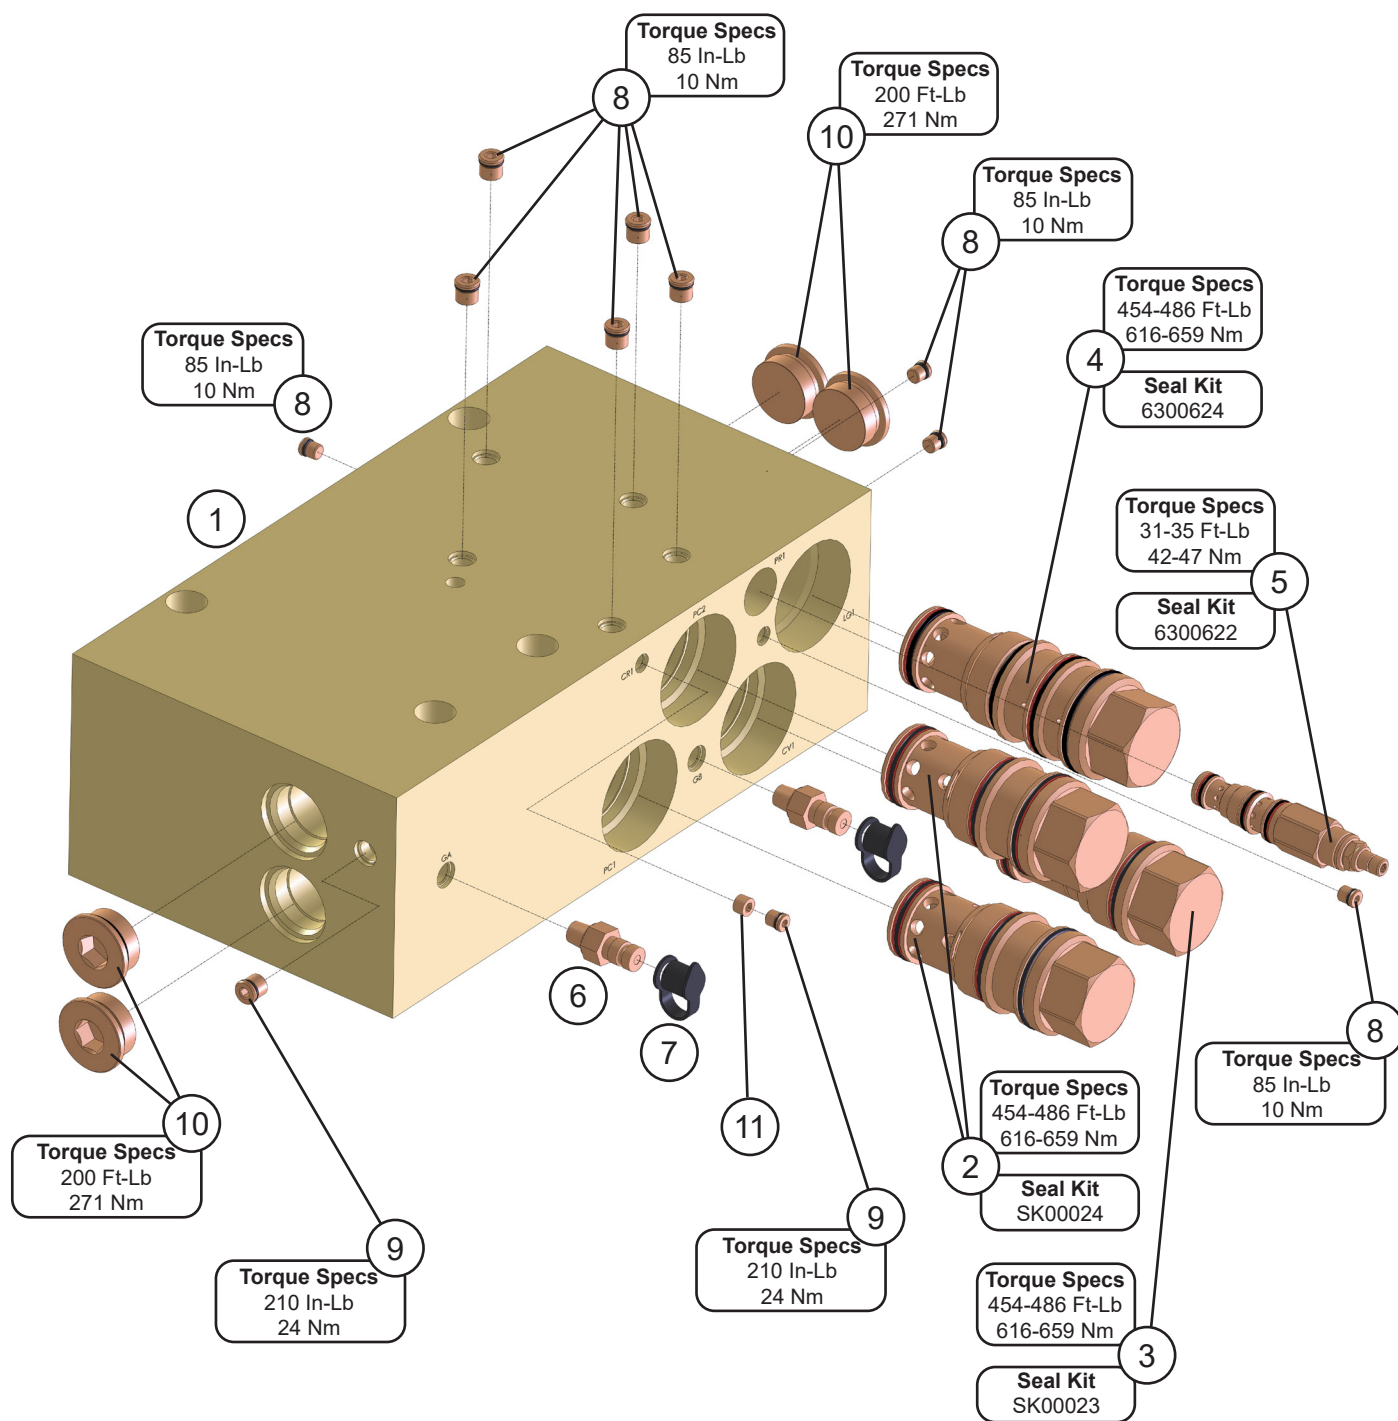

REGEN BLOCK SUB-ASSEMBLY

ITEM	QTY	PART NUMBER	DESCRIPTION	
1	1	6360021	Manifold Block	Seal Kit SK00129
2	2	6300061	Pilot to Close Check Valve	Seal Kit SK00024
3	1	6380011	Check Valve	Seal Kit SK00023
4	1	6300623	Logic Element	Seal Kit 6300624
5	1	6300625	Pressure Reducing Valve	Seal Kit 6300622
6	2	6300088	Diagnostic Nipple	
7	2	6310001	Diagnostic Nipple Dust Cap	
8	9	6300075	Plug Socket Head 02MB	
9	4	6300076	Plug Socket Head 04MB	
10	4	6300078	Plug Socket Head 16MB	
11	1	6300903	Plug Pipe Orifice 01MP 1/16-27 NPT	

ASSEMBLY SLEWING RING LUBRICATION

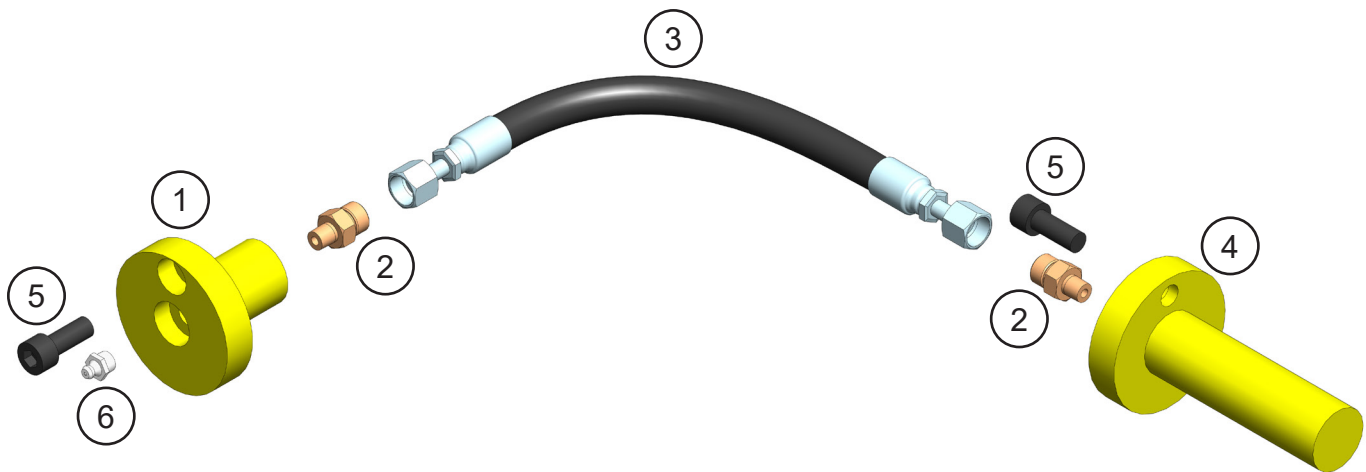

ASSEMBLY SLEWING RING LUBRICATION

ITEM	QTY	PART NUMBER	DESCRIPTION
1	1	5512411	Mach Grease Bulkhead Adaptor
2	2	6300731	Adaptor 02MP-04MO
3	1	5517830	Hose
4	1	5512419	Mach Slewing Ring Grease Adaptor
5	2	F0610025	Socket Head Capscrew M10 x 1.50 x 25
6	1	6200002	Grease Fitting

BOLT TORQUE SPECIFICATIONS

Reference the product Thread Treatment Diagram on page 39 to determine whether to use wet or dry torque values for specific bolts.

Reference Procedures on page 40 for threadlocker or anti-seize application and bolt and bolt hole cleaning.

Prior to torquing, clean all bolt holes, bolts and nuts to remove dirt, grease and oil, and identify bolt type.

Never re-torque bolts that use Loctite. If a bolt becomes loose or damaged after the initial use when Loctite was applied and the bolt was torqued, the bolt must be replaced.

Never break tightened bolts loose with a torque wrench. Doing so may break the torque wrench or take it out of calibration.

Torque wrenches should be calibrated on an annual basis.

When using a torque multiplier with a torque wrench, incorrect settings will be multiplied by the ratio of the torque wrench.


Never use an impact driver on a torque multiplier.

THREAD TREATMENT DIAGRAM

Mobile Shears

Use this diagram to determine what thread treatment, if any, is required for each fastener.

For thread treatment application procedures, see page 40. For prescribed torque values, see page 42

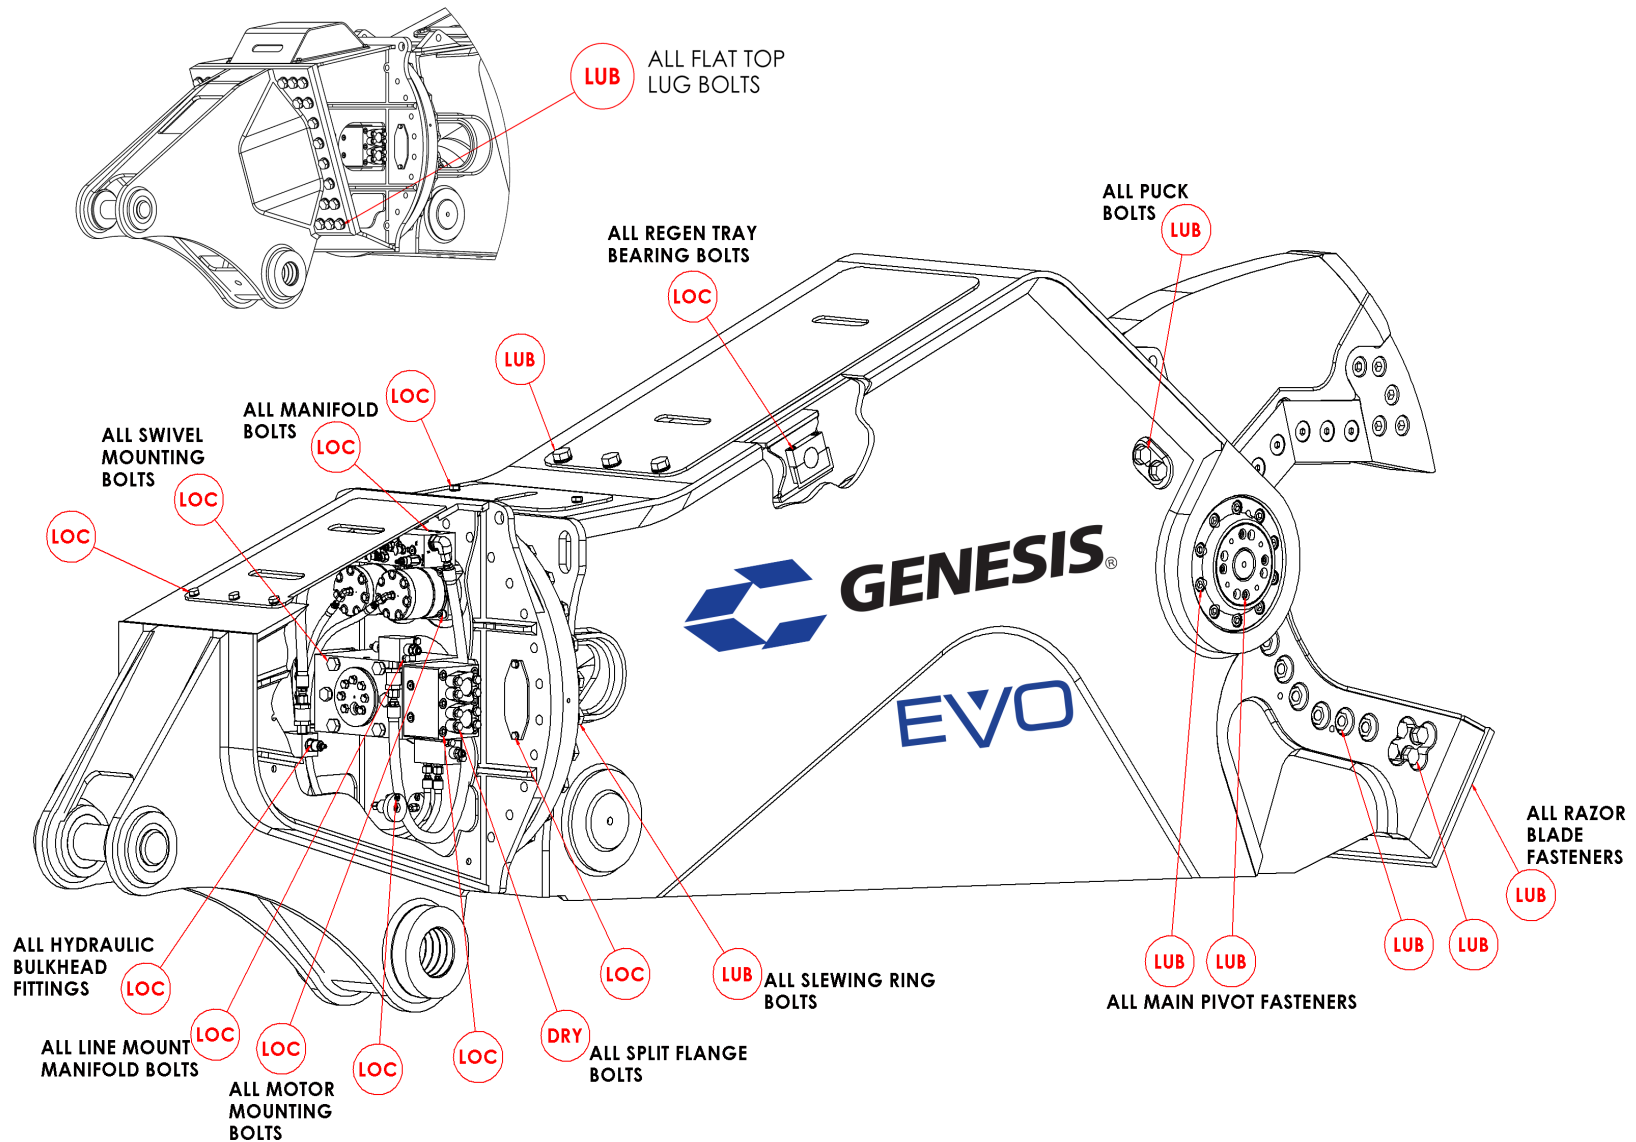

PROCEDURES

Reference the product Thread Treatment Diagram on page 39 to determine which of the following procedures is required.

Cleaning

To ensure proper performance of thread treatment and accurate torque values, clean and degrease **all internal and external threads** prior to application of threadlocker, anti-seize or primer and before installation of hardware.

- Ensure both internal and external threads are free of dirt or debris.
- Use brake cleaner or similar cleaning solvent on all threads to remove any grease or oil.
- Allow threads to dry.

NOTICE

Failure to properly clean threads will cause threadlocker, primer, and/or anti-seize to not properly cure!

LOC

Threadlocker


For bolted connections requiring threadlocker, use **Loctite 263** or equivalent applied using the following procedure:

- Clean and degrease all threads.
- For thru holes or nuts, apply threadlocker to bolt threads.
- For blind holes, apply stripe of threadlocker along the length of the hole (applying to the bolt can cause escaping air to remove threadlocker as the bolt is inserted).
- Torque bolt to specified **Wet Torque Value**, see page 42.


For threaded hydraulic fitting connections, use **Loctite 5452** or equivalent thread sealant in conjunction with **Loctite 7471** primer using the following procedure:

- Clean and degrease all threads.
- Apply Loctite 7471 primer to both external and internal threads and allow to dry.
- Apply threadlocker to 360 degrees of the threads on the male fitting, ensuring adequate coverage.
- Assemble fitting per directions in operator's manual.
- For O-ring boss and flat face O-ring connections, torque fittings to values specified on page 43.

Threadlocker

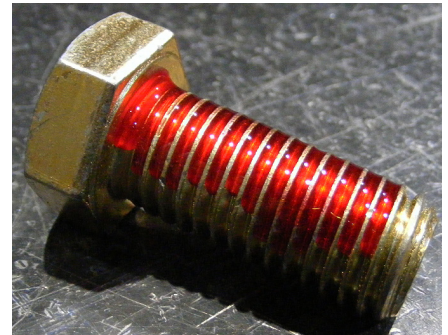

Blind Hole

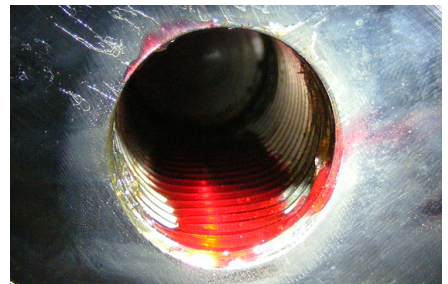

Hydraulic Fitting



PROCEDURES


LUB

Anti-Seize

For bolted connections requiring anti-seize lubrication, use **Loctite LB8008** or equivalent using the following procedure:

- Clean and degrease all threads.
- Apply thin coat of anti-seize to internal and external threads and under bolt head and/or nut, ensuring complete coverage.
- Torque bolt to specified **Wet Torque Value**, see page 42.

Anti-Seize

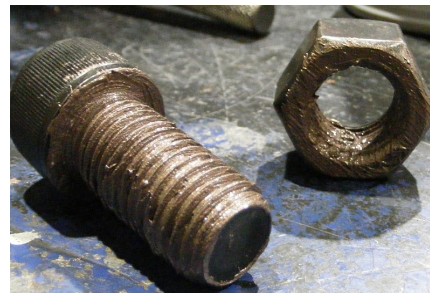

DRY

No Thread Treatment

- Clean and degrease all threads.
- Torque bolt to specified **Dry Torque Value**, see page 42.

BOLT TORQUE SPECIFICATIONS

Dry Torque Values

		Hex/Socket Head		Flat Head	
					
Fastener Grade	Size x Pitch	Nm	Ft-lb	Nm	Ft-lb
CL 10.9	M8 x 1.25	35	26	27	20
	M10 x 1.50	71	53	58	42
	M12 x 1.75	124	92	101	73
	M14 x 1.50	200	148	163	118
	M14 x 2.00	200	148	163	118
	M16 x 2.00	311	230	254	184
	M20 x 1.50	610	450	498	360
	M20 x 2.50	608	449	497	359
	M24 x 3.00	1054	778	861	622
	M27 x 3.00	1543	1138	1260	910
	M30 x 3.50	2095	1545	1712	1236
	M36 x 4.00	3659	2699	2991	2159
8	1/4-20	14	11	11	8
	5/16-18	32	24	26	19
	3/8-16	59	44	48	35
	7/16-14	94	70	77	56
	1/2-13	143	106	116	84
	1/2-20	162	120	133	96
	5/8-11	287	212	234	169
	3/4-10	509	376	415	300
	7/8-9	821	606	670	484
	1.00-8	1232	909	1007	727
	1.00-14	1383	1020	1130	816
	1.25-7	2463	1817	2013	1453
8/L9	1.50-6	4287	3162	3504	2529

Wet Torque Values

		Hex/Socket Head		Flat Head	
					
Fastener Grade	Size x Pitch	Nm	Ft-lb	Nm	Ft-lb
CL 10.9	M8 x 1.25	29	22	23	17
	M10 x 1.50	61	45	49	36
	M12 x 1.75	105	78	85	62
	M14 x 1.50	150	111	121	88
	M14 x 2.00	170	126	138	100
	M16 x 2.00	265	196	216	156
	M20 x 1.50	456	337	372	269
	M20 x 2.50	517	382	422	305
	M24 x 3.00	894	660	731	528
	M27 x 3.00	1312	968	1072	774
	M30 x 3.50	1779	1312	1453	1049
	M36 x 4.00	3110	2294	2542	1835
8	1/4-20	13	10	11	8
	5/16-18	27	20	22	16
	3/8-16	50	37	40	29
	7/16-14	80	59	65	47
	1/2-13	122	90	99	72
	1/2-20	138	102	112	81
	5/8-11	244	180	199	144
	3/4-10	433	320	354	256
	7/8-9	698	515	570	412
	1.00-8	1046	772	854	617
	1.00-14	1175	867	960	693
	1.25-7	2095	1545	1712	1236
8/L9	1.50-6	3644	2688	2979	2150

O-RING BOSS & FLAT FACE O-RING TORQUE SPECIFICATIONS

O-Ring Boss Torque Values		
Size Dash	Nm	Ft-lb
-4	22	16
-5	27	20
-6	36	26
-8	83	60
-10	110	80
-12	187	135
-14	249	180
-16	304	220
-20	387	280
-24	498	360

Flat Face O-Ring Torque Values		
Size Dash	Nm	Ft-lb
-4	18	13
-6	30	22
-8	60	44
-10	85	62
-12	121	88
-14	121	88
-16	160	116
-20	213	154
-24	274	198

BOLT DRIVE SPECIFICATIONS

Thread Size x Pitch	Hex Head	Socket Head	Flat Head
			
	Wrench/Drive Size		
M8 x 1.25	13mm	6mm	5mm
M10 x 1.50	17mm	8mm	6mm
M12 x 1.75	19mm	10mm	8mm
M14 x 1.50	22mm	12mm	10mm
M14 x 2.00	22mm	12mm	10mm
M16 x 2.00	24mm	14mm	10mm
M20 x 1.50	30mm	17mm	12mm
M20 x 2.50	30mm	17mm	12mm
M24 x 3.00	36mm	19mm	14mm
M27 x 3.00	41mm	19mm	-
M30 x 3.50	46mm	22mm	-
M36 x 4.00	55mm	27mm	-
1/4-20	7/16"	3/16"	5/32"
5/16-18	1/2"	1/4"	3/16"
3/8-16	9/16"	5/16"	7/32"
7/16-14	5/8"	3/8"	1/4"
1/2-13	3/4"	3/8"	5/16"
1/2-20	3/4"	3/8"	5/16"
5/8-11	15/16"	1/2"	3/8"
3/4-10	1-1/8"	5/8"	1/2"
7/8-9	1-5/16"	3/4"	9/16"
1.00-8	1-1/2"	3/4"	5/8"
1.00-14	1-1/2"	3/4"	5/8"
1.25-7	1-7/8"	7/8"	7/8"
1.50-6	2-1/4"	1"	1"

WARRANTY

Claim Procedure

Notify the Genesis Service Department of the potential warranty claim prior to making the repair. Digital pictures are very helpful for diagnosing problems and recommending repairs.

Contact the Genesis Service Department before making alterations, changes or repairs to any component that is going to be considered for warranty. Not doing so will void all Genesis warranty consideration.

The Genesis Service Department will issue an authorization number to track the repair costs, outgoing parts, and/or defective parts returning to the factory.

Replacement parts must be ordered using a purchase order number. Shipping is standard ground. Overnight shipping is available by request, and Genesis will not cover the shipping charge.

When the repair is complete, submit an invoice to the Genesis Service Department within 30 days. Include itemized internal labor reporting, parts lists and invoices for outside contractors. Reference the authorization number on all invoices.

When returning parts for warranty consideration, include a copy of any related Genesis paperwork along with any other necessary documentation to ensure proper processing and credit. The Genesis Service Department will provide the necessary forms.

Your account will be credited when the warranty claim is accepted.

Blade Warranty

Standard warranty on blades will only be considered on the first edge, and wear on the edge must be 1/8" radius or less. Genesis does not warranty cutting blades that are cracked or broken from top to bottom (perpendicular to the long edge of the blade). Genesis also does not cover fasteners, the labor to replace wear components or collateral damage, such as blade seats, from broken blades, the piercing blade tang or adjustment plates.

Please direct any questions to the Genesis Service Department: 715-395-5252

PARTS ORDER POLICY AND PROCEDURE

Parts Orders Should Include

- Purchase order number
- Model and serial number of attachment
- Part number and quantity needed
- Shipping and billing address
- Method of shipment or required delivery date

Placing Orders

Orders may be placed by phone or e-mail. To e-mail an order, use the form on the following page or your purchase order form. Contact information is located at the front of this manual.

Part Numbers

Part numbers are listed in a separate Parts Manual or, if included, the Parts section of this manual. Contact the Genesis Parts Department with questions regarding part numbers, availability and pricing.

Shipping

All orders will be shipped best way surface unless an alternate shipping method is requested. Shipping charges are not included in the purchase price of parts.

Invoices

All invoices are due upon receipt. Any accounts with invoices open beyond 60 days are subject to review and may be placed on C.O.D. status without further notice.

Returns

Many unused Genesis parts may be returned with proper documentation. Return shipping is the responsibility of the purchaser. Credit will be issued upon return, less a 25% restocking fee. Documentation is required for credit of returned parts. Contact the Genesis Service Department at 715-395-5252 for an RGA (Return Goods Authorization) number and form. An RGA must accompany every return. Items shipped without an RGA may be returned to sender.

Warranty Returns

All parts returned to Genesis for warranty consideration must be returned with a completed RGA (Return Goods Authorization) provided by the Genesis Service Department. The form needs to be completed in its entirety, including any additional information requested by the Service Department. Return shipping is the responsibility of the sender and will be credited upon claim approval. A determination to accept or deny the claim will be made based upon the information available to Genesis. Warranty on purchased parts other than wear components is 6 months. Genesis does not cover labor costs to replace purchased parts replaced under warranty. There is no warranty period on wear parts or components.

Customer: _____

Date: _____

Phone: _____

Contact: _____

Shipping Address: _____

E-mail: _____

Billing Address: _____

Purchase Order: _____

Shipping Method: _____

Model: _____

Serial Number: _____

Quantity	Part Number	Description	Price

E-mail to the Genesis Parts Department: genesisparts@genesisattachments.com
For assistance, call 715-395-3488

INDEX

1½" Split Flange Kit 31	6300075 Plug Socket Head 02MB 35
1¼" Split Flange Kit 31	6300076 Plug Socket Head 04MB 35
1101955 Mach Blade Razor 11	6300078 Plug Socket Head 16MB 35
1102487 Mach Pin Keeper (Clevis) 17	6300088 Diagnostic Nipple 35
1103125 Mach Bearing 7	6300153 Plug Socket Head 06MB 27
1103126 Mach Bearing 9	6300361 Valve Flow Control 29
1103172 Mach Pin Keeper Rear 17	6300364 Filter 29
1103536 Mach Blade 11,13	6300429 Bearing Slewing 23
1103609 Mach Bolt Socket Head Capscrew 1 - 8 x 4½ 13	6300623 Logic Element 35
1104649 Mach Adjust Plate Primary 11	6300625 Pressure Reducing Valve 35
1104650 Mach Adjust Plate Secondary 11	6300731 Adaptor 02MP-04MO 37
1104652 Shim Set, Blade 11	6300768 Adapter 04MB-04MO-90 25
1105883 Plt Bolt Cover 21	6300903 Plug Pipe Orifice 01MP 1/16-27 NPT 35
1105939 Mach Blade Tip Right 13	6301673 Valve Relief 27
1105940 Mach Blade Tip Left 13	6302658 Valve Line Body 29
1105941 Mach Blade Guide 11	6302661 Case Drain Manifold 25
1105943 Mach Pin Rear 17	6310001 Diagnostic Nipple Dust Cap 27,35
1105985 Wldt Front Cylinder Pin 17	6310050 Adapter 08MB - 08MO 29
1106413 Mach Guide Blade Adjust Plate 11	6310082 Adapter 12MB-08MO-90 25
1106414 Mach Guide Blade Adjust Plate 11	6310183 Adapter 08MB - 08MB 29
1106477 Shim Set, Guide Blade 11	6360021 Manifold Block 35
1106478 Shim Set, Auto Guide 15	6360143 Valve Block 27
1106561 Hose 31	6380011 Check Valve 35
1106562 Hose 31	6380090 Motor 23
1108011 Socket Head Capscrew Custom M12 x 1.75 x 70 23	Assembly Access Covers 5,18,19
1109210 Regen Tray Upper Bearing 31	Assembly Auto Guide 5,14,15
1110213 Mach Bearing Upper Cylinder Connection 17	Assembly Cylinder B14.0 R9.0 S32.75 31
1110254 Valve Regen Tray 31	Assembly Cylinder Pins 5,16,17
1110290 Plt Rear Cover 19	Assembly Lower Blades 5,10,11
1110385 Mach End Cap 7,9	Assembly Open and Close Circuit 5,30,31
1110387 Mach Tie Rod Nut 7,9	Assembly Pivot Group - Left Side 5,8,9
1110389 Mach Thrust Washer 7,9	Assembly Pivot Group - Right Side 5,6,7
1110390 Mach Tie Rod 7	Assembly Rotation 5,22,23,25
1110392 Wldt Cover 19	Assembly Rotation Circuit 5,24,25
1110396 Shim Set Thrust Washer 7,9	Assembly Slewing Ring Lubrication 5,36,37
1110397 Regen Tray Spacer 31	Assembly Swivel Manifold 5,31,32,33
1110703 Cylinder Spacer 31	Assembly Upper Blades 5,12,13
1110710 Hose 31	Assembly Upper Head 5,20,21
1110711 Hose 31	Bolt Drive Specifications 44
3101235 Motor Pinion 23	Bolt Torque Specifications 38,42
3501835 Mach Spacer 23	Contact Information 2,50
5500752 Plt Strap 21	Cover 21
5512411 Mach Grease Bulkhead Adaptor 37	F0110020 Hex Head Capscrew M10 x 1.50 x 20 21
5512419 Mach Slewing Ring Grease Adaptor 37	F0110030 Hex Head Capscrew M10 x 1.50 x 30 25,29
5517828 Hose 25	F0112030 Hex Head Capscrew M12 x 1.75 x 30 21
5517829 Hose 25	F0112050 Hex Head Capscrew M12 x 1.75 x 50 31
5517830 Hose 37	F0112080 Hex Head Capscrew M12 x 1.75 x 80 31
5519832 Hose 25	F0116050 Hex Head Capscrew M16 x 2.0 x 50 19
6200002 Grease Fitting 7,9,15,17,21,37	F0116060 Hex Head Capscrew M16 x 2.00 x 60 31
6200098 Snap Ring 17	F0116090 Hex Head Capscrew M16 x 2.0 x 90 31
6300014 Diagnostic Nipple 06MB 27	F0120260 Hex Head Capscrew M20 x 2.50 x 260 33
6300018 Adapter 06MB-06MO 25	F0127040 Hex Head Capscrew M27 x 3 x 40 19
6300061 Pilot to Close Check Valve 35	F0127120 Hex Head Capscrew M27 x 3 x 120 23
	F0210450 Hex Head Capscrew 1 - 8 x 4.75 15
	F0210600 Hex Head Capscrew 1 - 8 x 6.00 15

INDEX

F0288200 Hex Head Capscrew $\frac{7}{8}$ - 9 x 2	11	Seal Kit SK00129	35
F0288350 Hex Head Capscrew $\frac{7}{8}$ - 9 x $3\frac{1}{2}$	11	Seal Kit SK00375	27
F0288450 Hex Head Capscrew $\frac{7}{8}$ - 9 x $4\frac{1}{2}$	11	Seal Kit SK6300634	28,29
F0412030 Flat Head Capscrew M12 x 1.75 x 30	7,9	Sub-Assembly Line Mount Manifold	5,25,28,29
F0588450 Flat Head Capscrew $\frac{7}{8}$ - 9 x $4\frac{1}{2}$	11	Sub-Assembly Regen Block	5
F0588500 Flat Head Capscrew $\frac{7}{8}$ - 9 x 5	13	Sub-Assembly Rotate Cross-over / C'bal	5,25,26,27
F0588700 Flat Head Capscrew $\frac{7}{8}$ - 9 x 7	13	Table of Contents	3
F0610025 Socket Head Capscrew M10 x 1.50 x 25	37	Thread Treatment Diagram	39
F0612025 Socket Head Capscrew M12 x 1.75 x 25	7,9	Torque Arm Kit	33
F0612030 Socket Head Capscrew M12 x 1.75 x 30	7,9	Valve Counterbalance	27
F0612055 Socket Head Capscrew M12 x 1.75 x 55	31	Valve Regen	31
F0612120 Socket Head Capscrew M12 x 1.75 x 120	31	Warranty	45
F0620080 Socket Head Capscrew M20 x 2.50 x 80	7,9	Washer	21
F0620130 Socket Head Capscrew M20 x 2.50 x 130	17	Wldt Pin	21
F0620200 Socket Head Capscrew M20 x 2.50 x 200	17	Wtmg Lug Upper Head	5
F0908809 Hex Nut $\frac{7}{8}$ - 9	11,13	Wtmg Stick	5
F1020250 Nylock Hex Nut M20 x 2.50	17	Wtmg Upper	5
F1200100 Flat Washer Narrow 1"	15		
F1201021 Flat Washer M10	21		
F1300088 Flat Washer Narrow $\frac{7}{8}$	11,13		
F1401200 Lock Washer M12	21		
F1900040 Wedge Lock Washer $\frac{3}{8}$	25,29		
F1900050 Wedge Lock Washer $\frac{1}{2}$	23,31		
F1900063 Wedge Lock Washer $\frac{5}{8}$	19,31		
F1900075 Wedge Lock Washer $\frac{3}{4}$	33		
F1900113 Wedge Lock Washer $1\frac{1}{8}$	19		
F2588088 Set Screw Socket Head $\frac{7}{8}$ - 9 x $\frac{7}{8}$	11		
F2802700 Hytorc Washer M27	23		
General Arrangement	4,5		
H0262125 Split Flange Half 1.25 Code 62	31		
H0262150 Split Flange Half 1.50 Code 62	31		
Hex Head Capscrew	21,31		
Mach Bearing	21		
Mach Boom Bearing	21		
Mach Lug Upper Head	21		
Mach Main Shaft	9		
Mach Port Block	31		
Mach Spacer Sleeve	21		
Mach Sub Head	21		
O-Ring	31		
O-Ring Boss & Flat Face O-Ring Torque Specifications	43		
Parts Order Form	47		
Parts Order Policy and Procedure	46		
Procedures	40,41		
Regen Block Sub-Assembly	34,35		
S0190222 O-Ring	31		
S0190225 O-Ring	31		
S0190244 O-Ring	7,9		
Seal Kit 6300622	34,35		
Seal Kit 6300624	34,35		
Seal Kit 6300633	26		
Seal Kit SK00023	34,35		
Seal Kit SK00024	34,35		
Seal Kit SK00058	26		

CONTACT INFORMATION

Genesis Attachments

1000 Genesis Drive
Superior, WI 54880 USA

Toll Free: 888-SHEAR-IT
(888-743-2748)

Phone: 715.395.5252

E-mail:
info@genesisattachments.com

Europe/Africa/Middle East Genesis GmbH

Teramostrasse 23
87700 Memmingen, Germany

Phone: +49 83 31 9 25 98 0
Fax: +49 83 31 9 25 98 80
genesis-europe.com

E-mail:
info@genesis-europe.com

Asia Pacific Representative Office

24 Upper Serangoon View #12-28
Singapore 534205

Phone: +65 9673 9730

E-mail:
tchoo@genesisattachments.com

Central America & Colombia

Cra 13A #89-38 / Ofi 613
Bogota, Colombia

Phone: +57 1 610 8160 / 795 8747

E-mail:
contact@themsagroup.com