

GDT Tooth Build-Up Templates



Properly maintaining demolition attachment teeth maximizes performance and optimizes the life of replacement parts. As teeth become worn, they need to be rotated, built-up or replaced.

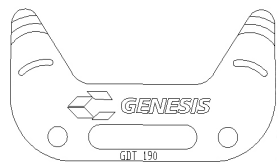
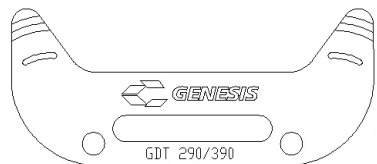
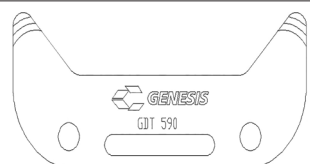

To help customers determine and monitor how far processor teeth have worn from their original shape, Genesis has created tooth build-up templates.

Each template is sized and formed to that tooth's original shape and features three lines that indicate wear level. Simply place the template over the tooth to determine the amount of wear and build-up required or if replacement is needed.



| | |
|---------------|---|
| Line 1 | ½" wear - schedule maintenance to flip or rotate in jaw |
| Line 2 | 1" wear - flip, rotate in jaw or build up |
| Line 3 | 1½" wear - replace, if all points are worn on flippable teeth |

Contact your local Genesis dealer or the Genesis Parts Department to order.

| Model | Part Number | Template |
|-----------|-------------|---|
| 190 | 9102985 |  |
| 290 & 390 | 9102930 |  |
| 590 | 9103745 |  |
| 890 | 9104041 |  |