

# LXP<sup>®</sup> Tooth Build-Up Templates



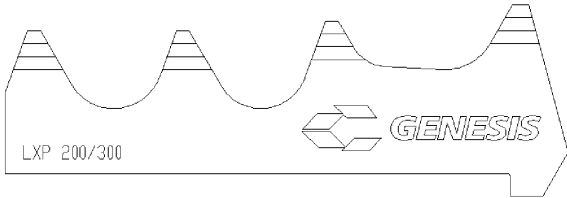
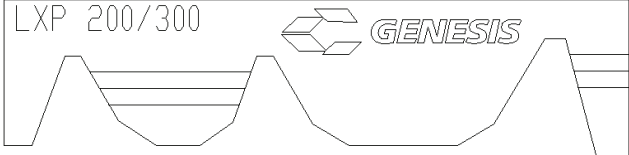
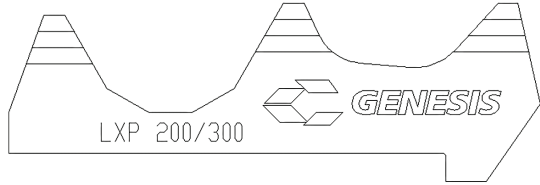
Properly maintaining demolition attachment teeth maximizes performance and optimizes the life of replacement parts. As teeth become worn, they need to be rotated, built-up or replaced.

To help customers determine and monitor how far processor teeth have worn from their original shape, Genesis has created tooth build-up templates.

Each template is sized and formed to that tooth's original shape and features three lines that indicate wear level. Simply place the template over the tooth to determine the amount of wear and build-up required or if replacement is needed.

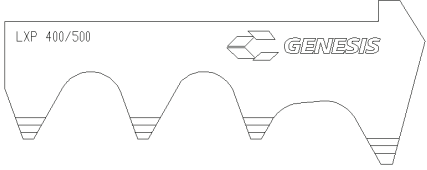
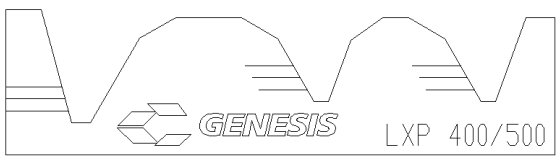
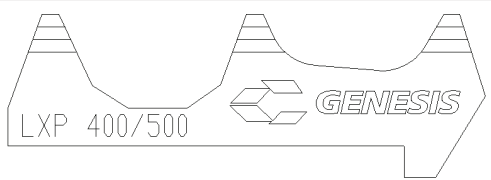
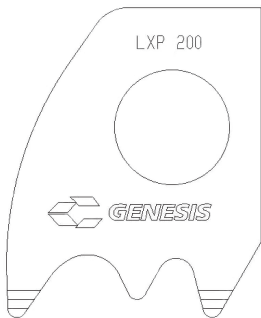
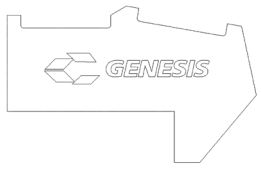
<b>Line 1</b>	½" wear - schedule maintenance to flip or rotate in jaw
<b>Line 2</b>	1" wear - flip, rotate in jaw or build up
<b>Line 3</b>	1½" wear - replace, if all points are worn on flippable teeth

Contact your local Genesis dealer or the Genesis Parts Department to order.

Model	Part Number	Template
200 & 300	9100582	
	9100583	
	9100584	

**LXP®**

# Tooth Build-Up Templates

Model	Part Number	Template
400 & 500	9100587	
	9100588	
	9100589	
200	9100852	
300 & 400	9100780	
500	9100853	
800	9102826	
	9102586	